



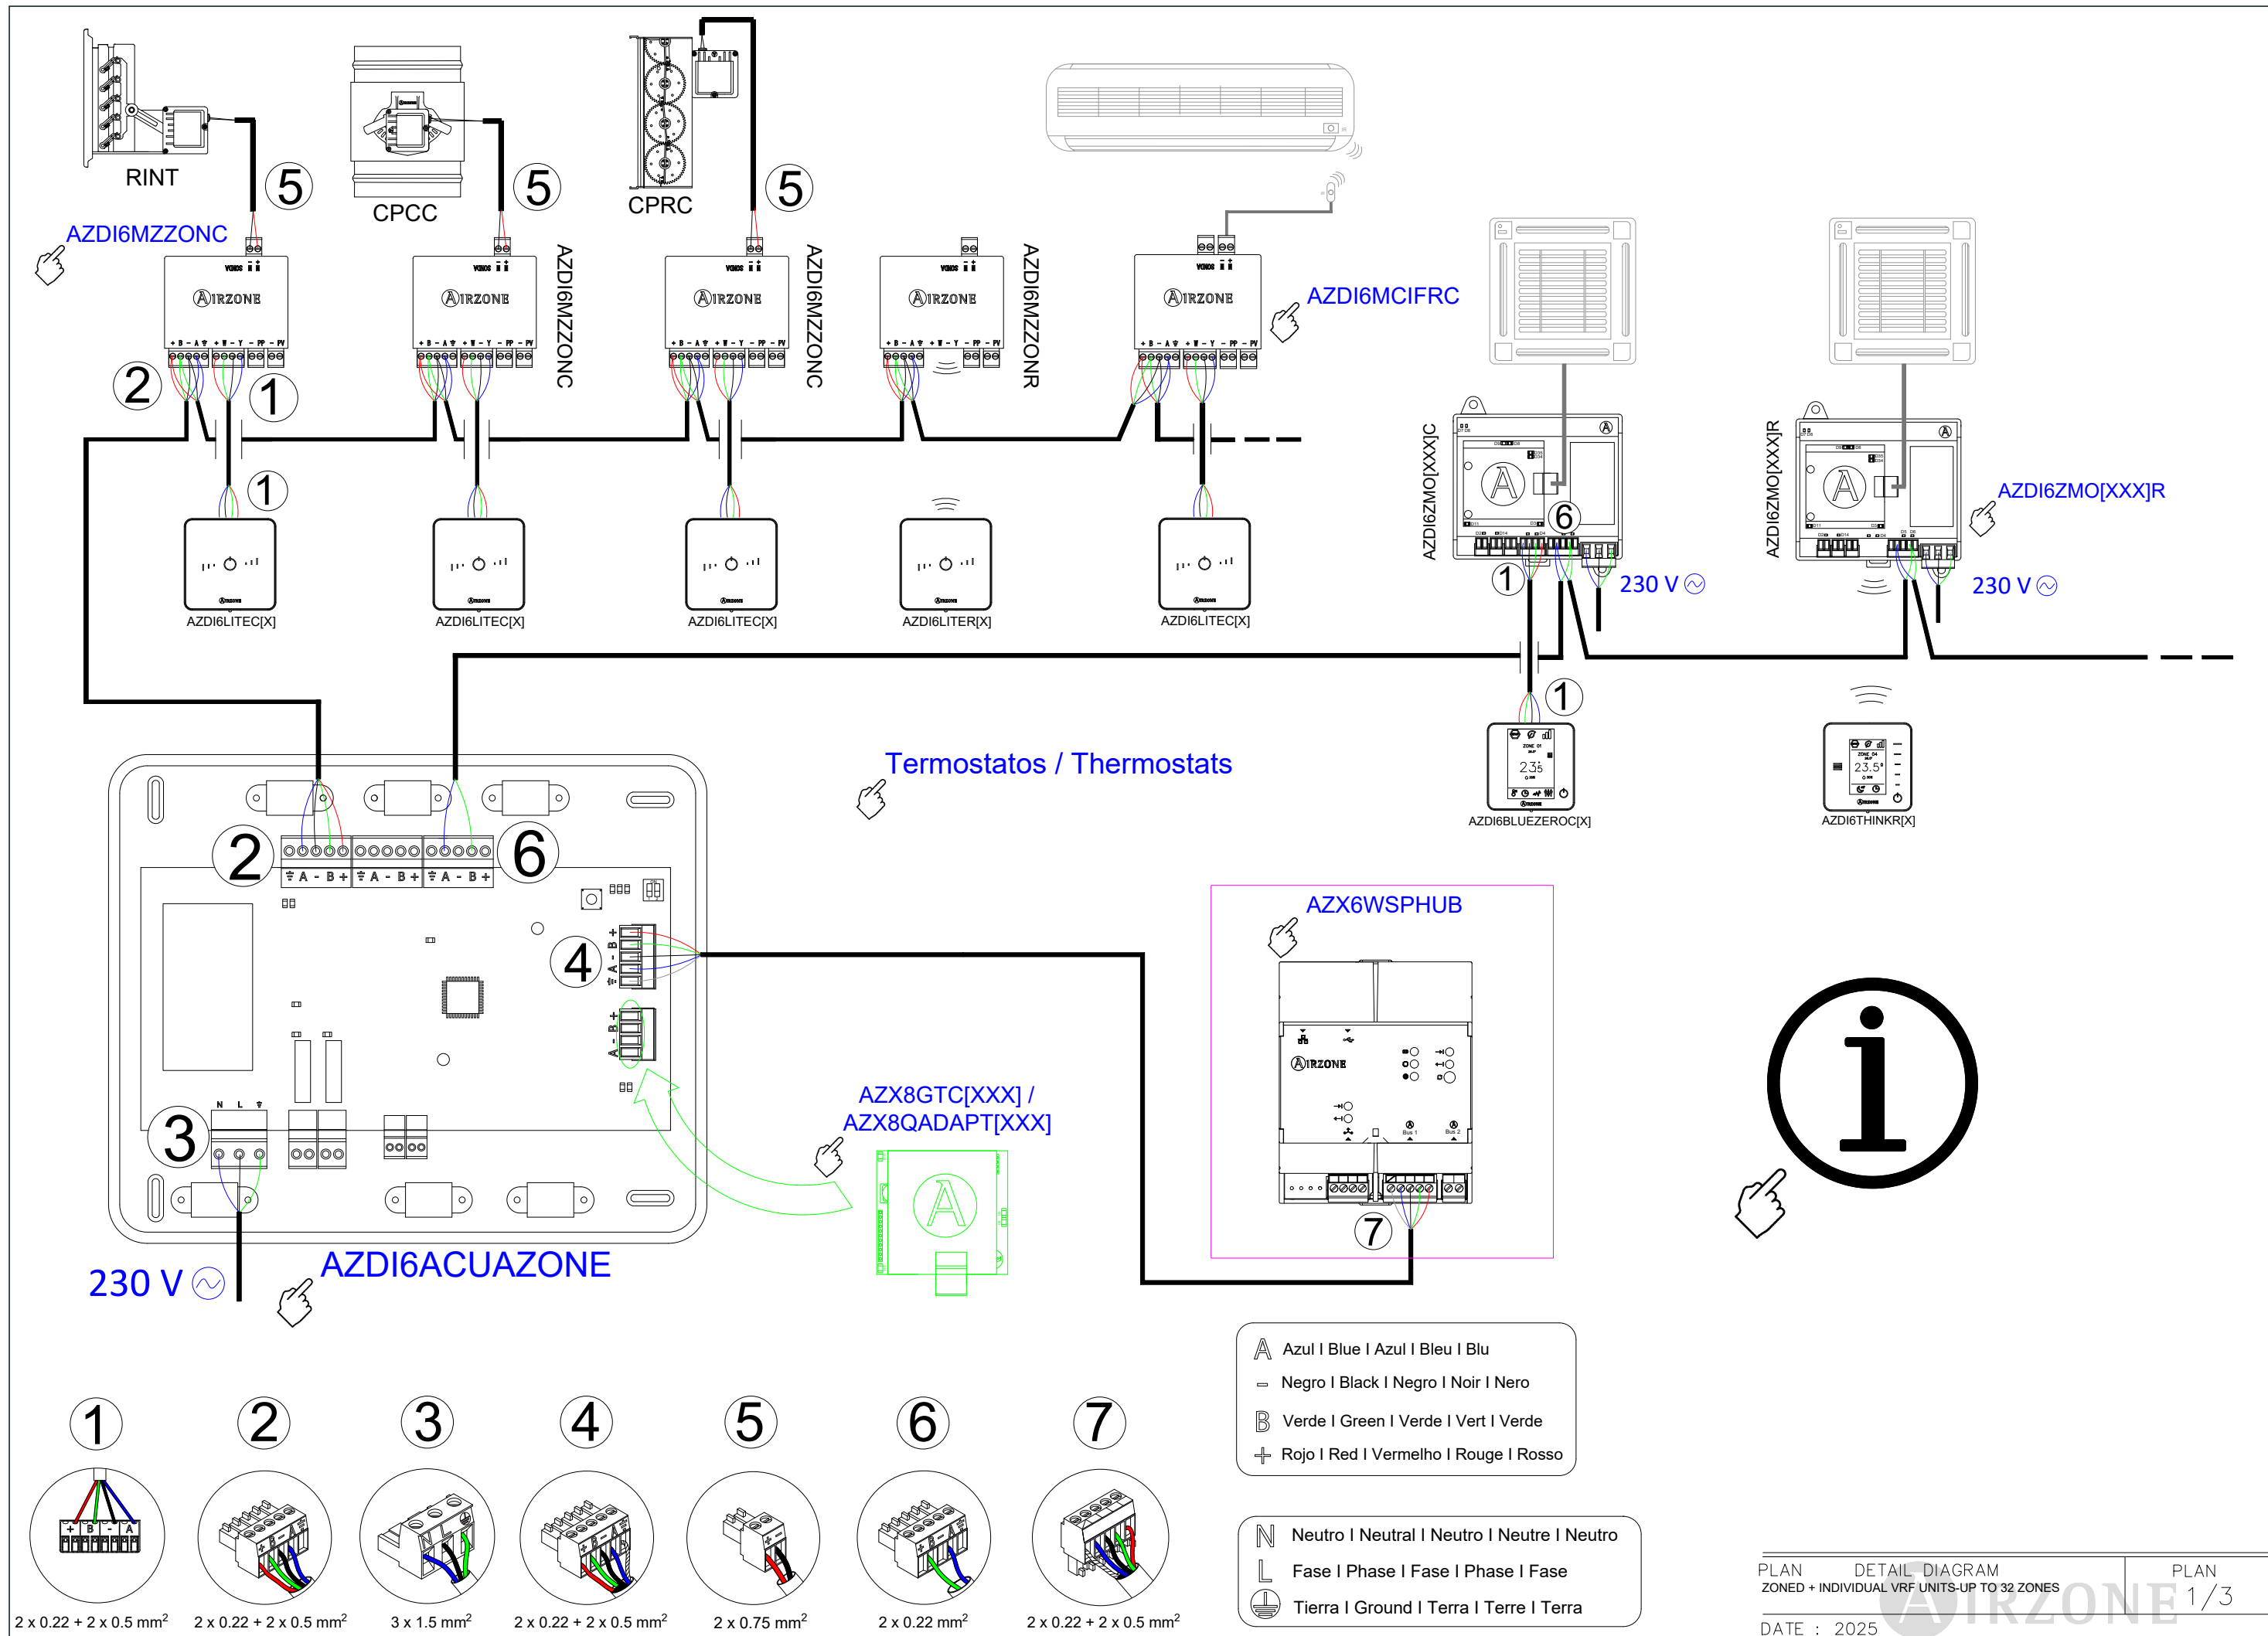

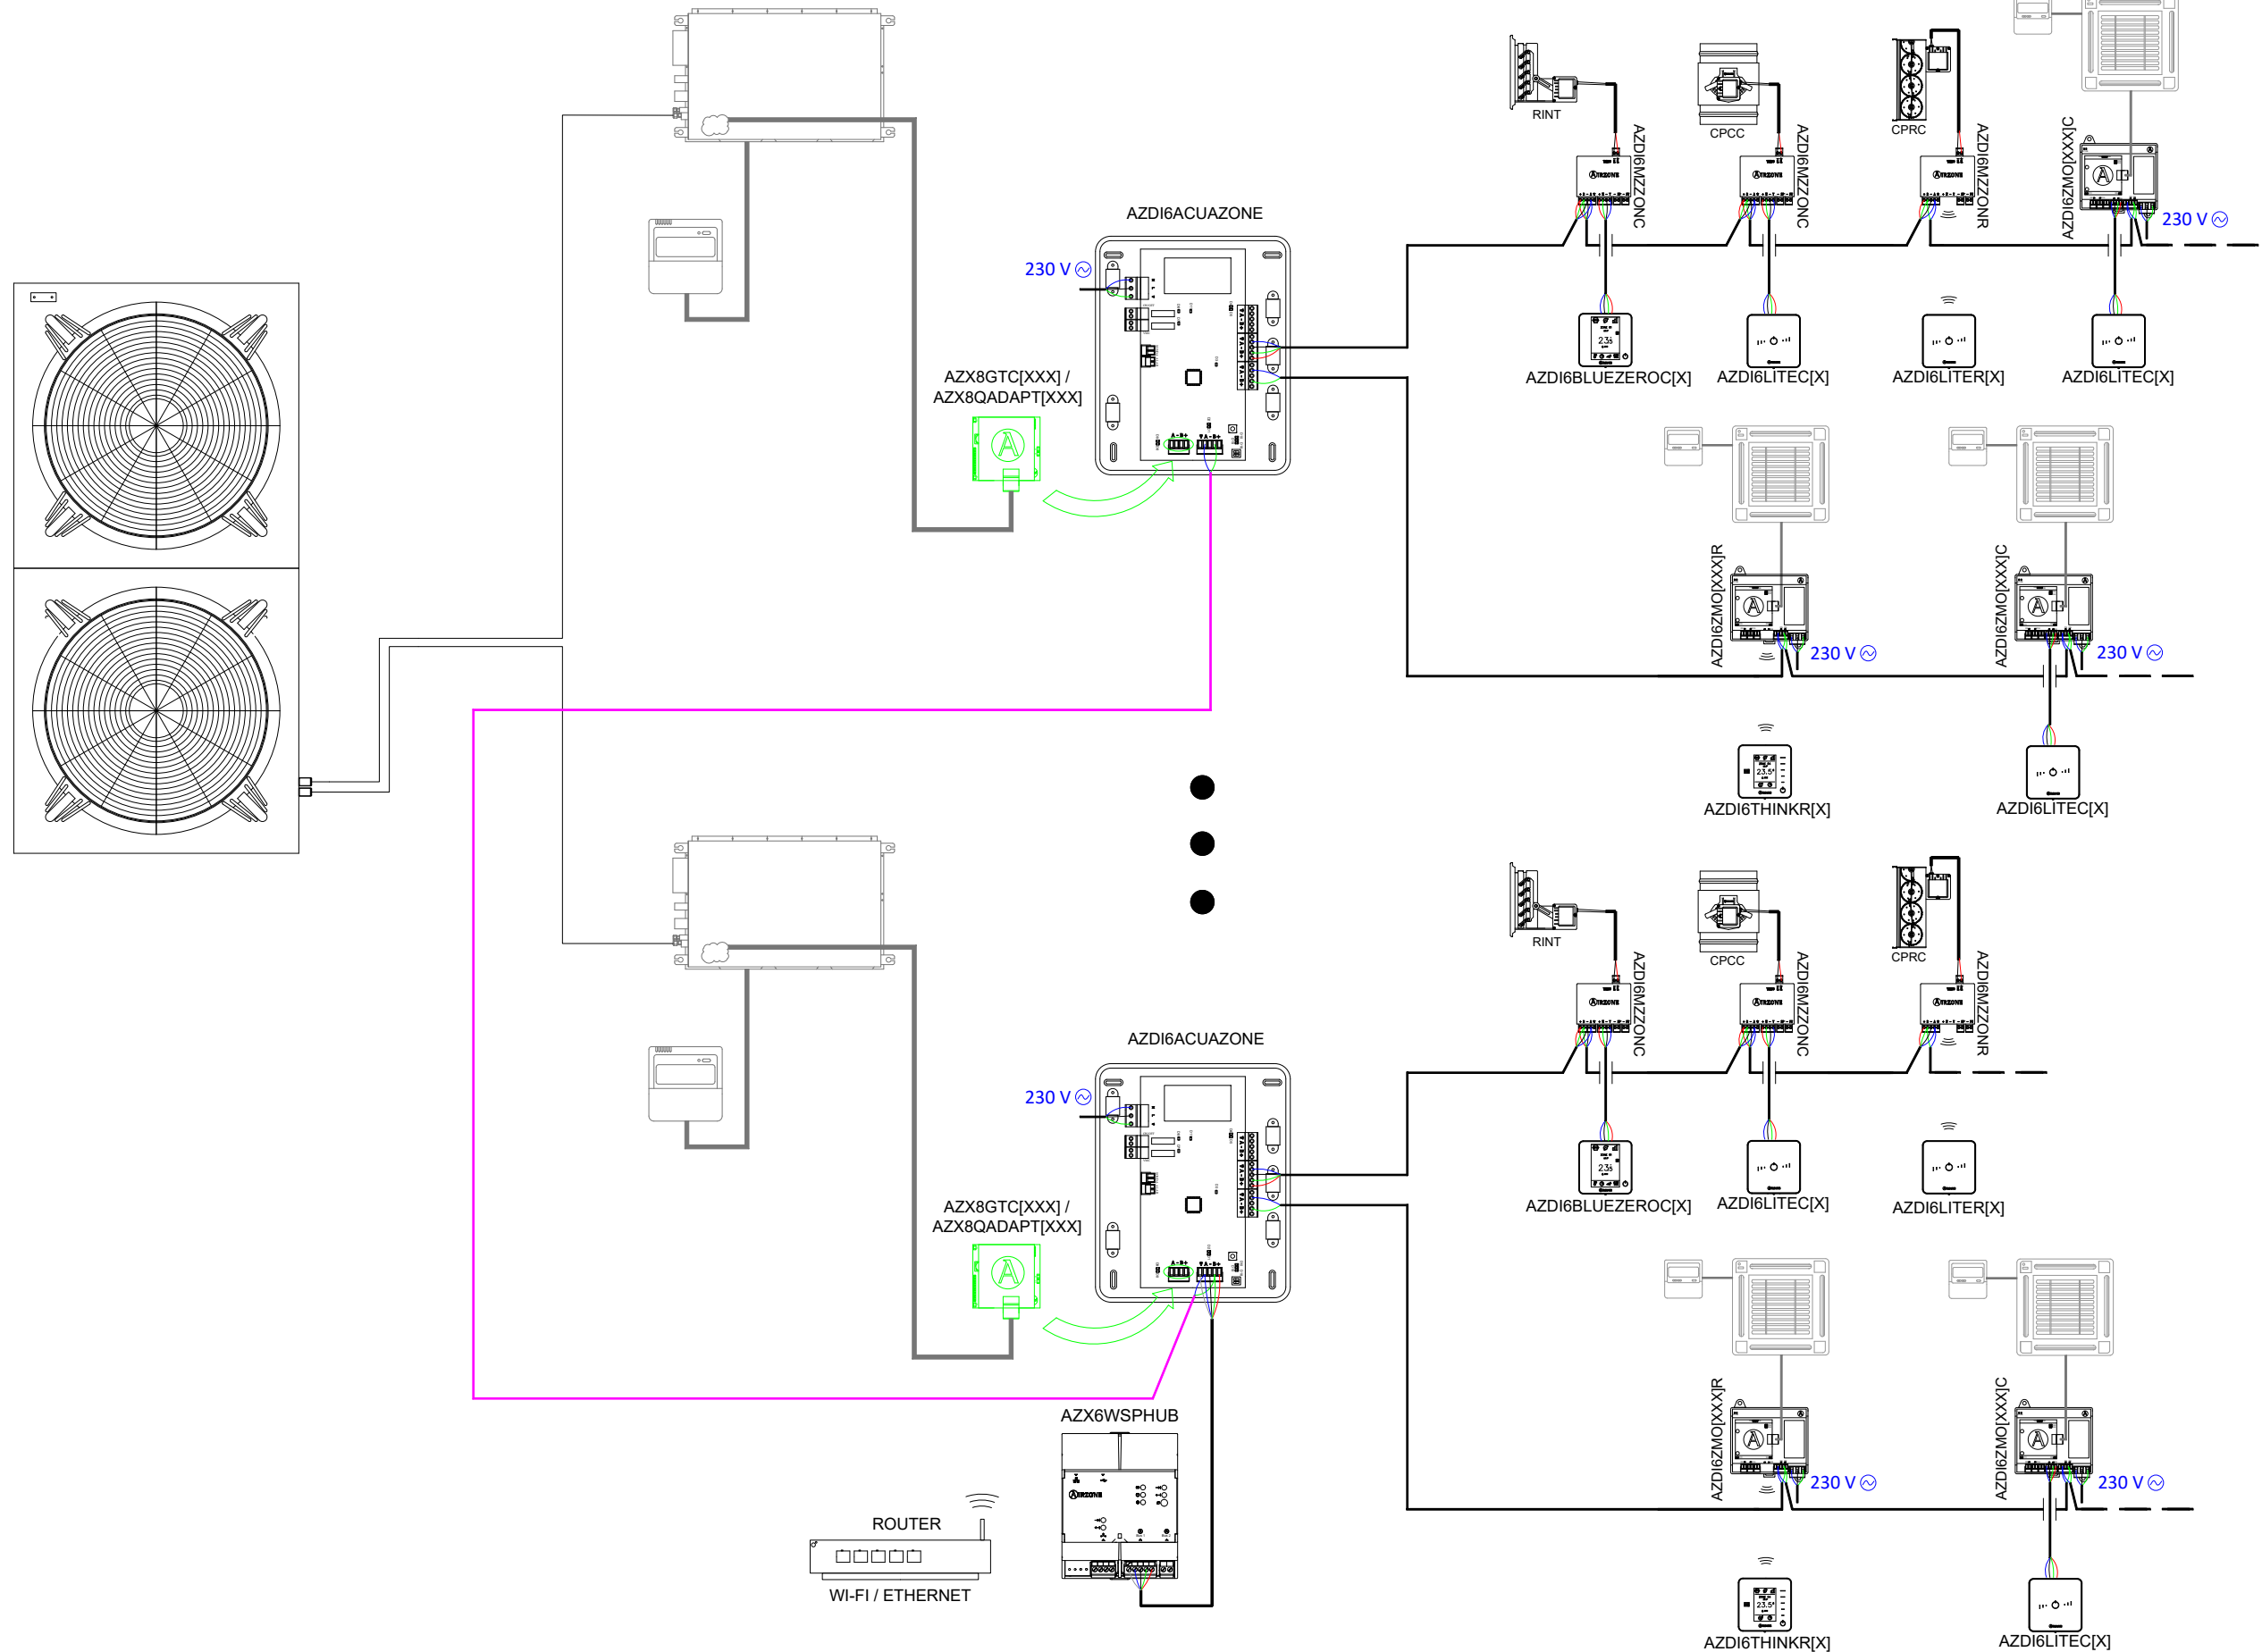

ACUAZONE

[ES] - EQUIPOS VRF DE CONDUCTOS ZONIFICADO E INDIVIDUALES HASTA 32 ZONAS

[EN] - ZONED + INDIVIDUAL VRF UNITS-UP TO 32 ZONES

[PT] - UNIDADES VRF DE CONDUTAS ZONIFICADAS E INDIVIDUAIS ATÉ 32 ZONAS

[FR] - UNITÉ GAINABLE DRV AVEC RÉGULATION MULTIZONE ET CONTRÔLE D'UNITÉS INDIVIDUELLES JUSQU'À 32 ZONES

[IT] - INSTALLAZIONE A VRF CON UNITÀ CANALIZZATE E INDIVIDUALI FINO A 32 ZONE

[DE] - VRF-GERÄTE MIT KANÄLEN, ZONENGESPEICHERT UND INDIVIDUELL, BIS ZU 32 ZONEN

	ESPAÑOL [ES]	ENGLISH [EN]	PORTUGUÊS [PT]
AZDI6ACUAZONE	CENTRAL DE SISTEMA AIRZONE ACUAZONE	AIRZONE ACUAZONE MAIN CONTROL BOARD	CENTRAL DO SISTEMA AIRZONE ACUAZONE
AZDI6BLUEZEROC[X]	TERMOSTATO BLUEFACE ZERO AIRZONE [COLOR]	AIRZONE BLUEFACE ZERO [COLOUR] THERMOSTAT	TERMOSTATO BLUEFACE ZERO [COR] AIRZONE
AZDI6THINKR[X]	TERMOSTATO RADIO THINK [COLOR] AIRZONE	AIRZONE THINK [COLOUR] WIRELESS THERMOSTAT	TERMOSTATO RADIO THINK [COR] AIRZONE
AZDI6LITE[C/R][X]	TERMOSTATO [CABLE/RADIO] LITE [COLOR] AIRZONE	AIRZONE LITE [COLOUR] THERMOSTAT [WIRED/WIRELESS]	TERMOSTATO [CABO/RADIO] LITE [COR] AIRZONE
AZDI6MZZON[C/R]	MÓDULO DE ZONA MOTOR [CABLE/RADIO] AIRZONE	AIRZONE ACTUATOR ZONE MODULE [WIRED/WIRELESS]	MÓDULO DE ZONA MOTOR [CABO/RADIO] AIRZONE
AZX6WSPHUB	WEBSERVER HUB AIRZONE CLOUD WIFI DUAL	WEBSERVER HUB AIRZONE CLOUD WIFI DUAL	WEBSERVER HUB AIRZONE CLOUD WIFI DUAL
AZDI6ZMO[XXX][C/R]	MÓDULO DE ZONA [CABLE/RADIO] AIRZONE UNIDAD INDIVIDUAL [MARCA]	AIRZONE [MANUFACTURER] INDIVIDUAL UNIT MODULE [WIRED/WIRELESS]	MÓDULO UNIDADE INDIVIDUAL [CABO/RADIO] AIRZONE [MARCA]
AZX8GTC[XXX] / AZX8QADAPT[XXX]	PASARELA CONTROLADOR AIRZONE [MARCA]	AIRZONE [MANUFACTURER] CONTROLLER GATEWAY	GATEWAY CONTROLADOR AIRZONE [MARCA]
NOTES	1- La distancia máxima entre la pasarela/módulo individual y la unidad interior es de: 5m 2- La distancia máxima de conexión en bus es de 100 m.	1- The maximum distance between the gateway/individual module and the indoor unit is: 5m 2- The maximum bus connection distance is 100 m.	1- A distância máxima entre o gateway/módulo individual e a unidade interior é de: 5m 2- A distância máxima de ligação em bus é de 100 m.

	FRANÇAIS [FR]	ITALIANO [IT]	DEUTSCH [DE]
AZDI6ACUAZONE	PLATINE CENTRALE AIRZONE DU SYSTÈME ACUAZONE	SCHEDA CENTRALE AIRZONE ACUAZONE	SYSTEMZENTRALE AIRZONE ACUAZONE
AZDI6BLUEZEROC[X]	THERMOSTAT [COULEUR] AIRZONE BLUEFACE ZERO	TERMOSTATO [COLORE] AIRZONE BLUEFACE ZERO	AIRZONE BLUEFACE ZERO [FARBE] THERMOSTAT
AZDI6THINKR[X]	THERMOSTAT [COULEUR] AIRZONE THINK RADIO	TERMOSTATO RADIO THINK [COLOR] AIRZONE	AIRZONE THINK [FARBE] THERMOSTAT FUNK
AZDI6LITE[C/R][X]	THERMOSTAT [COULEUR] AIRZONE LITE [FILAIRE/RADIO]	TERMOSTATO [CAVO/RADIO] LITE [COLORE] AIRZONE	AIRZONE LITE [FARBE] THERMOSTAT [VERKABELT/FUNK]
AZDI6MZZON[C/R]	MODULE LOCAL AIRZONE [FILAIRE/RADIO]	MODULI DI ZONA AIRZONE MOTORIZZAZIONE [CAVO/RADIO]	AIRZONE ZONENMODUL MOTORISIERUNG [KABEL/FUNK]
AZX6WSPHUB	WEBSERVER HUB AIRZONE CLOUD WIFI DUAL	WEBSERVER HUB AIRZONE CLOUD WIFI DUAL	WEBSERVER HUB AIRZONE CLOUD WIFI DUAL
AZDI6ZMO[XXX][C/R]	MODULE LOCAL AIRZONE [MARQUE] UNITE INDIVIDUELLE [FILAIRE/RADIO]	MODULO DI ZONA AIRZONE U.I. SINGOLA [MARCHIO] [CAVO/RADIO]	AIRZONE ZONENMODUL EINZELNE INNENEINHEIT [MARKE] [KABEL/FUNK]
AZX8GTC[XXX] / AZX8QADAPT[XXX]	PASSERELLE CONTROLEUR AIRZONE [MARQUE]	INTERFACCIA DI CONTROLLO AIRZONE [MARCHIO]	AIRZONE STEUERUNGSSCHNITTSTELLE [MARKE]
NOTES	1- La distance maximale entre la passerelle/le module individuel et l'unité intérieure est de: 5m 2- La distance maximale de connexion sur le bus est de 100 m.	1- La distanza massima tra l'interfaccia/modulo singolo e l'unità interna è di: 5m 2- La distanza massima di collegamento sul bus è di 100 m.	1- Der maximale abstand zwischen dem gateway/einzelmodul und dem innengerät beträgt 5 m 2- Die maximale Busverbindungslänge beträgt 100 m.

ÍNDICE / INDEX / ÍNDICE / INDEX / INDICE / INHALT						
PAG.	ESPAÑOL [ES]	ENGLISH [EN]	PORTUGUÊS [PT]	FRANÇAIS [FR]	ITALIANO [IT]	DEUTSCH [DE]
1	ESQUEMA DETALLADO	DETAIL DIAGRAM	ESQUEMA DETALHADO	SCHÉMA DE DÉTAIL	SCHEMA DI DETTAGLIO	DETAIL-DIAGRAMM
2	ESQUEMA DE INSTALACIÓN	WIRING DIAGRAM	ESQUEMA DE INSTALAÇÃO	SCHÉMA D'INSTALLATION	SCHEMA D'INSTALLAZIONE	INSTALLATIONSVERBINDUNGS SCHEMA
3	HOJA DE REFERENCIA / LEYENDA	REFERENCE SHEET / LEGEND	FOLHA DE REFERÊNCIA / LEGENDA	FEUILLE DE RÉFÉRENCE / LÉGENDE	FOGLIO DI RIFERIMENTO / LEGENDA	REFERENZBLATT / LEGENDE