

AZCE8CM1VALR

AZCE8CM1VALC

AZCE8CM1DRY

 


AZX6AIQSNS

AZC25CBxIAQ Connection




Installation
Manual



CAN: CAN bus
AZx: Airzone
connection bus
DM: Automation bus
IU: AC unit bus
IOx: Ionizers/Actuators
output
DI1: Alarm input
AI1: Probe input
Ox: Relays outputs

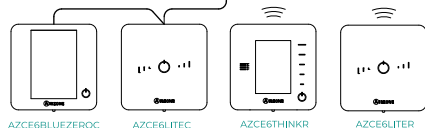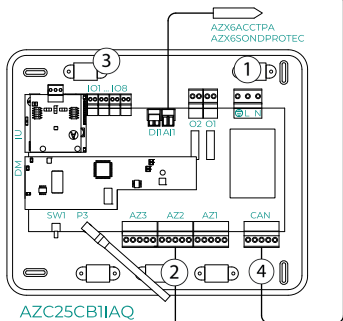

Power supply

   

Zone 1:

Zone 2:

Zone 3:

Zone 4:

Zone 5:

Zone 6:

Zone 7:

Zone 8:



LB150100C25IAQ1