 
 
 
 



AZC25CBxMOT Connection



Installation
Manual

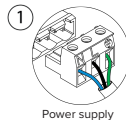

N Neutral
L Phase
⏏ Ground

A Blue
- Black
B Green
+ Red
Shield

Zone 1:

Zone 2:

Zone 3:


Zone 4:

Zone 5:

Zone 6:

Zone 7:

Zone 8:

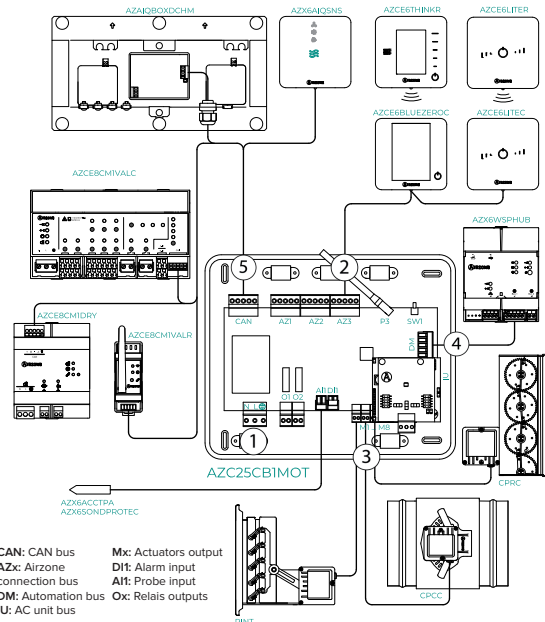

CAN: CAN bus
AZ: Airzone
connection bus
DM: Automation bus
IU: AC unit bus

Mx: Actuators output
DI1: Alarm input
AI1: Probe input
Ox: Relais outputs

