



Installation Manual



AZPV8CB1IAQ Connection

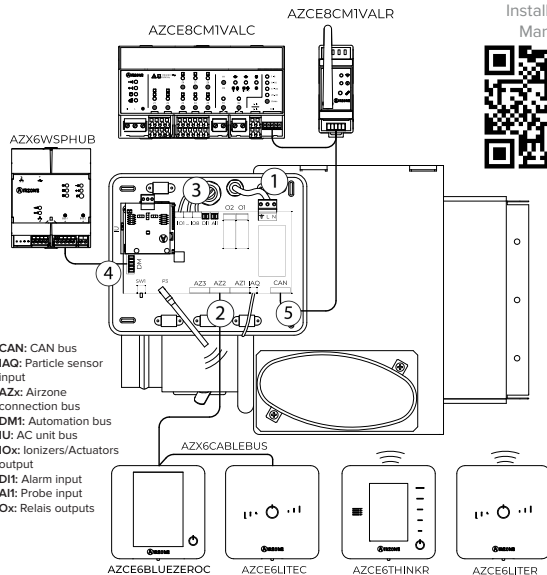

CAN: CAN bus
IAQ: Particle sensor input
AZx: Airzone connection bus
DM1: Automation bus
IU: AC unit bus
IOx: Ionizers/Actuators output
DI1: Alarm input
AI1: Probe input
Ox: Relais outputs

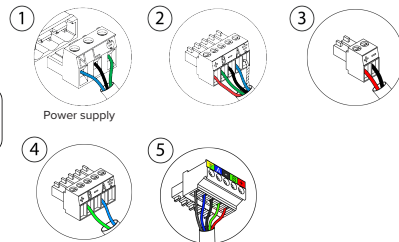

Zone 1:

Zone 2:

Zone 3:

Zone 4:

Zone 5:

Zone 6:

Zone 7:

Zone 8:



181501 00E28101

