


Thermostats A Complete Guide









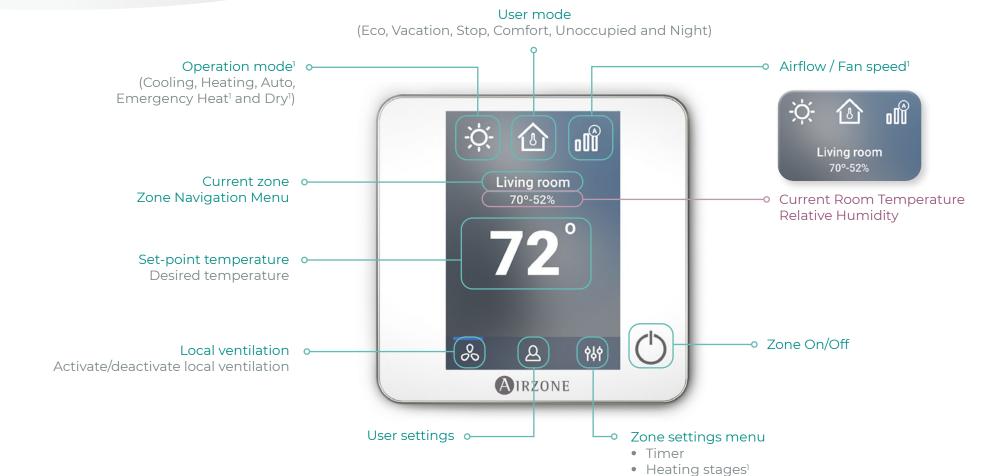

- Capacitive icons (touch screen) ———— Informative icons






• Lite Settings (access from Zone Navigation Menu)







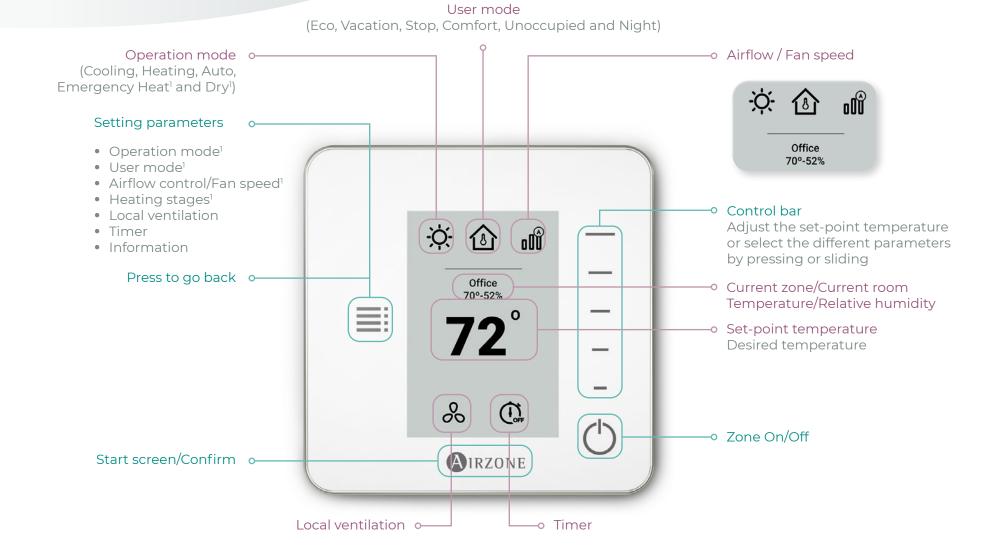



Informative icons

Capacitive icons (touch screen)





Airzone Lite



If the status LED is steady

The zone in which the thermostat is located is on.

If the status LED is blinking

If the LED blinks slowly, it means that the zone in which it is located is off. It can be turned on again by pressing the LED or from remote zones.


If the LED blinks rapidly in red or purple, it means that there is an error. You can check this on the Airzone Blueface or using the Airzone Cloud арр.

If the status LED is off

The thermostatis in energy saving mode. In the case of the Airzone wireless Lite thermostat, this will happen by default. If it is a wired Lite thermostat, you can configure this parameter in Lite settings through remote zones from your Airzone Blueface thermostat or using the Airzone Cloud app.

The set-point temperature is the desired temperature.

The default base temperature is 73°F and configured from the Lite settings parameter through remote zones from your Airzone Blueface thermostat or using the Airzone Cloud app.

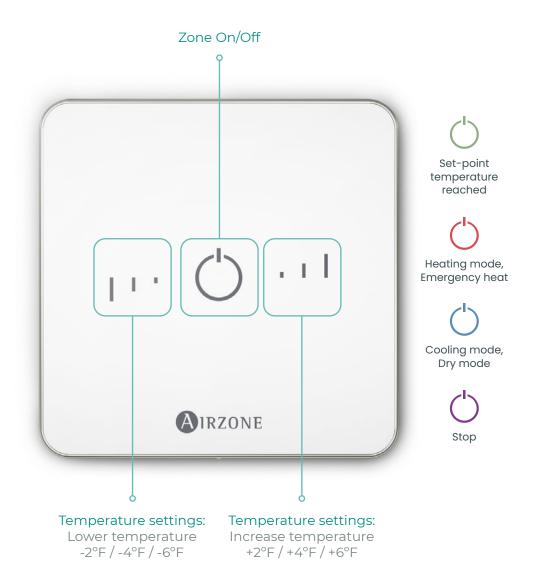





Airzone North America Corporation 1800 SW 1st Ave. Suite 203. Miami FL 33129

airzonecontrol.com







