



FI


Integroitiohje

Aidoo Pro Modbus Aquarea M

Panasonic

Tuote PAW-AZAW-MBS-M

[Tuote AZA16WSPPN9]

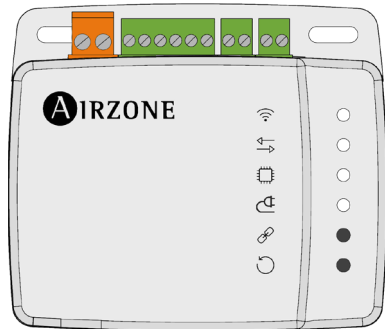

AIRZONE

Sisällysluettelo

VAROTOIMENPITEET JA YMPÄRISTÖNSUOJELUUN LIITTYVÄT OHJEET	3
> Varotoimenpiteet	3
> Ympäristönsuojeluun liittyvät ohjeet	3
RS-485-TIETOLIIKENNELIITIN	4
> Liitäntä	4
MODBUS-PROTOKOLLA	5
> Orjalaitteen osoitteen konfigurointi Aidoo Pro Modbus Panasonic Aquarea M -laitetta varten	5
MODBUS-FUNKTIOKOODIT	6
MODBUS-KOMENNOT	6
> Kirjoituskomennot	7
> Kirjoita yksittäinen pitorekisteri	7
> Kirjoita useita rekistereitä	7
> Lukukomennot	8
> Kysymys	8
> Vastaus	8
GATEWAY SETUP FOR PANASONIC	9
> Verkon konfigurointi	9
> Modbus RS-485:n konfigurointi	11
MODBUS-REKISTERIT	12
> Aidoo Pro Modbus Panasonic Aquarea M (PAW-AZAW-MBS-M [AZAI6WSPPN9])	12
VIRHEKOODIT	26
> Aidoo Pro Modbus Panasonic Aquarea M (PAW-AZAW-MBS-M [AZAI6WSPPN9])	26

Varotoimenpiteet ja ympäristönsuojeluun liittyvät ohjeet

VAROTOIMENPITEET

- Noudata seuraavia ohjeita sekä oman että laitteiden turvallisuuden varmistamiseksi:
- Älä käsittele järjestelmää märillä tai kosteilla käsillä.
- Katkaise sähkönsyöttö ennen minkään liitäntöjen tekemistä.
- Varo aiheuttamasta oikosulkua järjestelmän missään liitännässä.

YMPÄRISTÖNSUOJELUUN LIITTYVÄT OHJEET



Älä hävitä tätä laitetta kotitalousjätteen mukana. Sähkö- ja elektroniikkalaitteet sisältävät aineita, jotka voivat vahingoittaa ympäristöä, jos niitä ei käsitellä asianmukaisesti. Erilliskeräysmerkintä, eli roska-astia, jonka päälle on vedetty rasti, osoittaa, että kyseistä sähkölaitetta ei saa hävittää yhdyskuntajätteen mukana. Kun laite on hävitettävä, se on toimitettava asianmukaiseen keräyspisteeseen, jotta ympäristönsuojeluun liittyvät seikat tulevat huomioiduiksi.

Laitteen osat voidaan kierrättää. Noudata voimassa olevia ympäristönsuojelua koskevia määräyksiä.

Jos vaihdat laitteen toiseen laitteeseen, sinun on palautettava käytöstä poistettu laite jälleenmyyjälle tai vietävä se asianmukaiseen keräyspisteeseen.


Asiaa koskevien lakien ja muiden määräysten rikkomisesta aiheutuvat sakot ja muut vastaavat menettelyt on esitetty ympäristönsuojelua koskevassa lainsäädännössä.

RS-485-tietoliikenneliitin



RS-485 (tunnetaan myös nimellä EIA-485) on tiedonsiirtostandardi väylälle.

Integrointiväylä	
Tietoliikenneportin nopeus	9 600 bps
Tiedonsiirto	Vuorosuuntainen
Kehyksen pituus	8 bittiä
Stop-bitti	2 bitti
Vuonohjaus	Ei mitään
Pariteetti	Ei mitään

LIITÄNTÄ

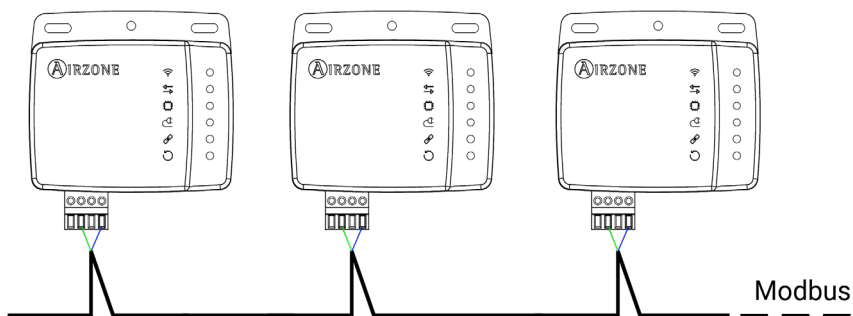

Varmista, että vain tiedonsiirtokaapelit (vihreä-sininen) on kytketty vastaaviin kiinteistöautomaatiojärjestelmien väyliin, jotta järjestelmä voi toimia kunnolla. Kiinnitä johtimet liittimien ruuveilla värikoodien mukaisesti.

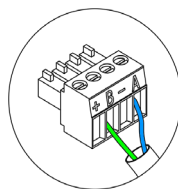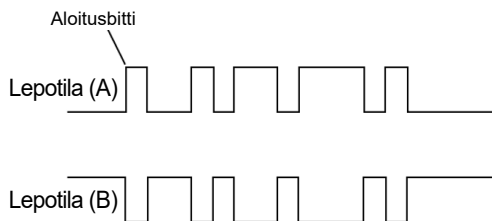

A Sininen
B Vihreä

Modbus-protokolla

Modbus-protokolla on tiedonsiirtoprotokolla, jolla luodaan **isäntä-orja-/asiakas-palvelin-arkkitehtuuriin** perustuva yhteys erityyppisiin väyliin tai verkkoihin liitettyjen älykkäiden laitteiden välillä.

Jokaiselle Modbus-tiedonsiirtoprotokollaa käyttävälle laitteelle annetaan yksilöllinen osoite. Isäntälaitteet lähettävät komennon kehyksessä, joka sisältää laitteen tai päätelaitteiden (orjalaitteiden) osoitteen. Kehys lähetetään kaikille laitteille, mutta vain tarkoitettu vastaanottaja tulkitsee sen ja toteuttaa komennon. Modbus-komennot sisältävät tarkistussummatiedon, jonka avulla vastaanottaja voi havaita lähetetyssä tiedossa mahdollisesti olevat virheet.

***Huomautus:** Tietoja voidaan lähettää samanaikaisesti usealle laitteelle käyttämällä "Broadcast"-kehyistä.*



Jokainen viesti sisältää redundanttia tietoa, jolla varmistetaan, että viesti on vastaanotettu oikein. Jos isäntälaitte ei tietyin ajan kuluessa saa vahvistusta, se tulkitsee, että on tapahtunut virhe, ja lopettaa viestinnän.

Käytetty tietoliikenteen muoto on MODBUS-RTU. Jokaista datatavua edustaa kaksi nelibittistä merkkiä heksadesimaalimuodossa. Kehysformaatti on seuraava:

Aloituis	0	1	2	3	4	5	6	7	Pariteetti	Lopetus
----------	---	---	---	---	---	---	---	---	------------	---------

ORJALAITTEEN OSOITTEEN KONFIGUROIINTI AIDOO PRO MODBUS PANASONIC AQUAREA M -LAITETTA VARTEN

Aidoo on **Modbus-orjalaite**, joten sen osoite on yksilöitävä järjestelmässä. Tee se liittämällä Aidoo-laitteesi Gateway Setup for Panasonic -sovelluksen kautta kohdassa "Gateway Setup for Panasonic" esitettyjä vaiheita noudattaen (sovellus on saatavana iOS- ja Android-käyttöjärjestelmiin).

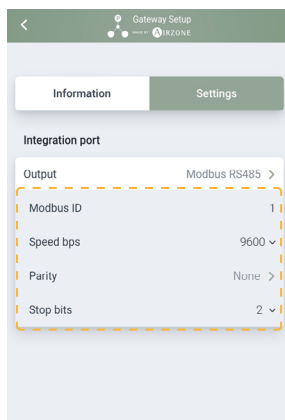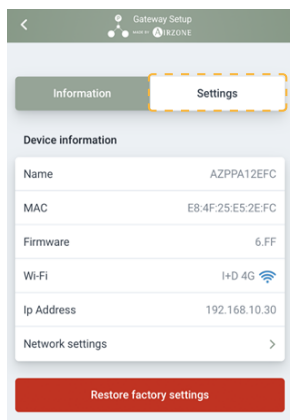

Modbus-funktiokoodit

Modbus-protokollan peruskomennot mahdollistavat laitteen hallinnan sen jonkun rekisterin (muistipaikan) arvoa muuttamalla tai pyytämällä näiden rekisterien sisältöjä koodien mukaan:

Koodi	Toiminto
03	Pitorekisterien luku
04	Tulorekisterien luku
06	Aseta/kirjoita yksittäinen pitorekisteri
16	Aseta/kirjoita useita pitorekistereitä

Modbus-komennot

Luku- ja kirjoitustoimintojen komentojen formaatti on seuraava (8-tavuinen):

Orjalaitteen osoite	Toimintokoodi	Rekisteriosoite	Data	CRC
1 tavu	1 tavu	1 tavu	1–2·N tavua	2 tavua

- **Orjalaitteen osoite:** Määrittää järjestelmän, johon halutaan muodostaa yhteys. Modbus-komento sisältää sen laitteen Modbus-osoitteen, jolle komento on tarkoitettu (väliä 1–247). Osoite "0" on varattu kaikille laitteille tarkoitettuun yleislähetykseen (broadcast).
- **Toimintokoodi:** Määrittää suoritettavan toiminnon.
- **Rekisteriosoite:** Määrittää käytettävän toiminnon. Komennoissa, jotka suoritetaan useammassa rekisterissä, määrittää käynnistyslokien, josta haluat suorittaa toiminnot peräkkäisessä järjestyksessä.
- **Data:** Muodostuu kahdesta tavusta (yksinkertaiset toiminnot) tai kahden tavun joukosta (jos toimintoja on useampi kuin yksi), joka sisältää komennon tiedot.
- **CRC:** Vuon loppuun lisätään kaksi tavua lähetys- ja vastaanottovirheiden havaitsemista varten. Tämä toteutetaan käyttämällä CRC-tarkistussummaa (Cyclic Redundant Code).

Virittäjäpolynomi: $\text{CRC-16} = x^{16} + x^{15} + x^2 + 1$.

KIRJOITUSKOMENNOT

Kirjoita yksittäinen pitorekisteri

Tavu	Kenttä
0	Orjalaitteen osoite (1–247) (0: broadcast-yleislähetys)
1	Kirjoita yksittäinen rekisteri (6)
2	Rekisteriosoite
3	
4	Kirjoitettava data
5	
6	CRC
7	

Vastauksen on oltava täsmälleen samassa muodossa kuin kirjoituskomennon, jos siinä ei ole virhetyyppejä.

Kirjoita useita rekistereitä

Tavu	Kenttä
0	Orjalaitteen osoite (1–247) (0: broadcast-yleislähetys)
1	Kirjoita useita rekistereitä (16)
2	Aloituserikisterin osoite
3	Kirjoitettavien rekisterien lukumäärä (N)
4	
5	Kirjoitettavan datan kokonaistavumäärä (2·N)
6	Rekisteriin 1 kirjoitettava data
7	
...	
5 + 2·N	Rekisteriin N kirjoitettava data
6 + 2·N	
7 + 2·N	CRC
8 + 2·N	

Vastaus, jos siinä ei ole virheitä, on seuraava:

Tavu	Kenttä
0	Orjalaitteen osoite (1–247) (0: broadcast-yleislähetys)
1	Kirjoita useita rekistereitä (16)
2	Aloituserkisterin osoite
3	
4	
5	Kirjoitettavien rekisterien lukumäärä (N)
6	CRC
7	

LUKUKOMENNOT

Kysymys

Tavu	Kenttä
0	Orjalaitteen osoite (1–247) (0: broadcast-yleislähetys)
1	Lue tietueita (3/4)
2	Aloituserkisterin osoite
3	
4	Luettavien rekisterien lukumäärä (N)
5	
6	CRC
7	

Vastaus


Tavu	Kenttä
0	Orjalaitteen osoite (1–247) (0: broadcast-yleislähetys)
1	Pitorekisterien luku (3/4)
2	Vastaustavujen määrä (2·N)
3	Rekisteristä 0 luettavat tiedot
4	
...	
3 + 2·N	Rekisteristä N luettavat tiedot
4 + 2·N	
5 + 2·N	CRC
6 + 2·N	

Gateway Setup for Panasonic



VERKON KONFIGUROIINTI

Jos napsautat painiketta *Konfigurointi* "Gateway Setup for Panasonic" -sovelluksen päänäkylässä, voit valita sovelluksen käyttämän kielen ja lämpötilan yksiköt.

- **Versio.** Sovelluksen versio.
- **Kieli.** Sovellus on saatavana yhdeksällä kielellä (saksa, kreikka, englanti, espanja, ranska, italia, puola, portugali ja turkki).
- **Yksiköt.** Celsius (°C) tai Fahrenheit (°F).
- **Active feedback (Aktiivinen palaute).** Toiminto edellyttää, että laitteen värinätoiminto on aktivoitu.

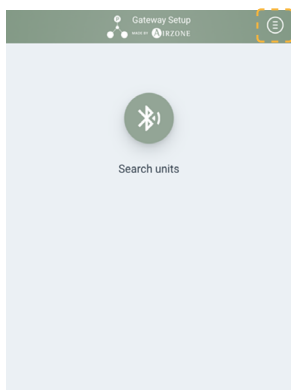

Päänäkymän *Bluetooth*-kuvakkeen napauttaminen käynnistää lähellä olevien laitteiden haun. Jatka valitsemalla oma "Aidoo Pro Modbus Panasonic Aquarea M" -laitteesi.

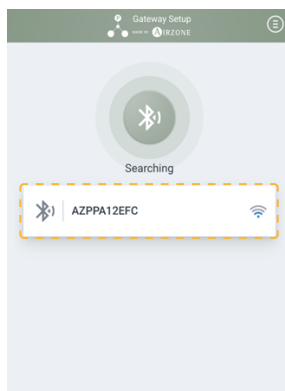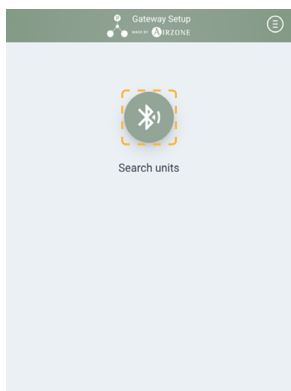



Kun laite on valittu, näyttöön avautuu tietovalikko.

- **Nimi.** Laitteen nimi.
- **MAC.** Laitteen MAC-osoite.
- **Laiteohjelmisto.** Laitteen versio.
- **Wi-Fi.** Laitteeseen liitetty verkko.
- **IP-osoite.** Laitteen IP-osoite.
- **Verkon konfigurointi.** Laitteen asetusten määrittäminen.

Voit palauttaa alkuperäiset arvot painamalla painiketta *Palauta tehdasasetukset*.




Jos sinun on vaihdettava Wi-Fi-verkkoa, siirry alivalikkoon *Verkon konfigurointi*.

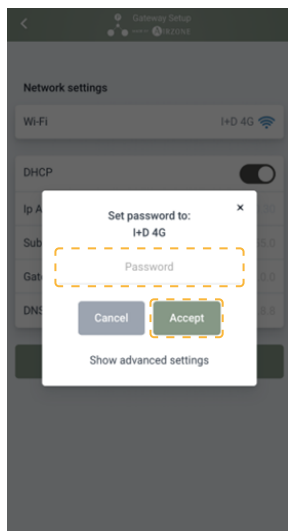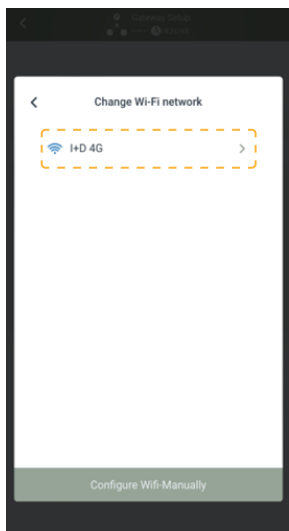

MODBUS RS-485:N KONFIGUROINTI

Konfigurointivalikossa voit muuttaa seuraavia laitteen parametreja:

- **Modbus ID -tunnus.** Arvo väliltä 1–255.
- **Nopeus bps.** Valittavissa on 14 nopeusasetusta (100, 300, 500, 600, 1 200, 2 400, 4 800, 7 800, 9 600 (oletus), 19 200, 38 400, 57 600, 76 800 ja 115 200 bps).
- **Pariteetti.** Ei, parillinen tai pariton.
- **Stop-bitit.** Valitse arvo 1 tai 2.

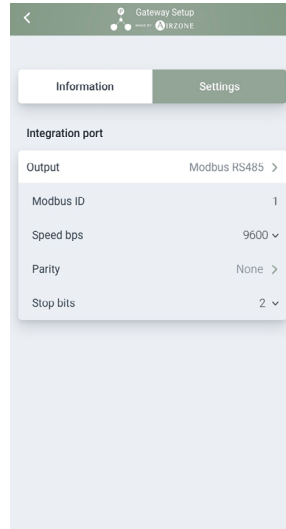

Lataa Gateway Setup for Panasonic -sovellus

Modbus-rekisterit

AIDOO PRO MODBUS PANASONIC AQUAREA M (PAW-AZAW-MBS-M [AZAI6WSPPN9])

Registers	Description	Values	Read (R) Write (W)	Operations
0	Operation	0 → Off 1 → On	R & W	0x03, 0x04, 0x06, 0x10, 0x16
1	Outdoor actual temperature	- 127 °C ~ 127 °C	R	0x03, 0x04
2	Outlet water temperature	- 127 °C ~ 127 °C	R	0x03, 0x04
3	Inlet water temperature	- 127 °C ~ 127 °C	R	0x03, 0x04
4	Mode	1 → Heat 2 → Heat tank 3 → Tank 4 → Cool tank 5 → Cool 6 → Auto (default) 7 → Auto tank	R & W	0x03, 0x04, 0x06, 0x10, 0x16
		8 → Auto heat 9 → Auto heat tank 10 → Auto cool 11 → Auto cool tank	R	0x03, 0x04
5	Heat mode water temperature sensor	1 → Compensation curve 2 → Direct	R & W	0x03, 0x04, 0x06, 0x10, 0x16
6	Cool mode water temperature sensor	1 → Compensation curve 2 → Direct	R & W	0x03, 0x04, 0x06, 0x10, 0x16
9	Zone 1 / Zone 2 On/Off	1 → On/Off 2 → Off/On 3 → On/On	R & W	0x03, 0x04, 0x06, 0x10, 0x16
10	Zone 1 sensors	1 → Water temperature 2 → External 3 → Internal 4 → Thermistor	R & W	0x03, 0x04, 0x06, 0x10, 0x16
11	Zone 2 sensors	1 → Water temperature 2 → External 3 → Internal 4 → Thermistor	R & W	0x03, 0x04, 0x06, 0x10, 0x16

Registers	Description	Values	Read (R) Write (W)	Operations
12	Zone 1: [Water shift/room/pool] set point temperature	HEAT Water Shift → - 5 °C ~ 5 °C Water → 20 °C ~ 75 °C ¹ Room → 10 °C ~ 30 °C Pool → 15 °C ~ 35 °C COOL Water Shift → - 5 °C ~ 5 °C Water → 5 °C ~ 20 °C Room → 18 °C ~ 35 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
13	Zone 2: [Water shift/room/pool] set point temperature	HEAT Water Shift → - 5 °C ~ 5 °C Water → 20 °C ~ 75 °C ¹ Room → 10 °C ~ 30 °C Pool → 15 °C ~ 35 °C COOL Water Shift → - 5 °C ~ 5 °C Water → 5 °C ~ 20 °C Room → 18 °C ~ 35 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
14	Zone 1: Actual [water outlet/ room/pool] temperature	- 127 °C ~ 127 °C	R	0x03, 0x04
15	Zone 2: Actual [water outlet/ room/pool] temperature	- 127 °C ~ 127 °C	R	0x03, 0x04
16	Zone 1: Temperature conf. mode	1 → Room 2 → Compensation curve 3 → Direct 4 → Pool	R	0x03, 0x04
17	Zone 2: Temperature conf. mode	1 → Room 2 → Compensation curve 3 → Direct 4 → Pool	R	0x03, 0x04
18	Zone 1: Min. set point temperature	HEAT Water Shift → - 5 °C Water → 20 °C Room → 10 °C Pool → 15 °C COOL Water Shift → - 5 °C Water → 5 °C Room → 18 °C	R	0x03, 0x04

¹ Arvot voivat vaihdella sisäyksikön mallista riippuen. Enimmäisarvo on määritetty Rekisteri 36.

Registers	Description	Values	Read (R) Write (W)	Operations
19	Zone 1: Max. set point temperature	HEAT Water Shift → 5 °C Water → 75 °C ¹ Room → 30 °C Pool → 35 °C COOL Water Shift → 5 °C Water → 20 °C Room → 35 °C	R	0x03, 0x04
20	Zone 2: Min. set point temperature	HEAT Water Shift → - 5 °C Water → 20 °C Room → 10 °C Pool → 15 °C COOL Water Shift → - 5 °C Water → 5 °C Room → 18 °C	R	0x03, 0x04
21	Zone 2: Max. set point temperature	HEAT Water Shift → 5 °C Water → 75 °C ¹ Room → 30 °C Pool → 35 °C COOL Water Shift → 5 °C Water → 20 °C Room → 35 °C	R	0x03, 0x04
30	Tank On/Off	0 → Off 1 → On	R & W	0x03, 0x04, 0x06, 0x10, 0x16
32	Tank actual temperature	- 127 °C ~ 127 °C	R	0x03, 0x04
33	Tank water set temperature	40 °C ~ 75 °C ¹	R & W	0x03, 0x04, 0x06, 0x10, 0x16
34	Tank heater	1 → Internal 2 → External	R & W	0x03, 0x04, 0x06, 0x10, 0x16
35	Tank water min. set point temperature	40 °C	R	0x03, 0x04
36	Tank water max. set point temperature	55 °C ~ 75 °C	R	0x03, 0x04
45	Tank mode energy consumption	0 ~ 65.534 W	R	0x03, 0x04

¹ Arvot voivat vaihdella sisäyksikön mallista riippuen. Enimmäisarvo on määritetty Rekisteri 36.

Registers	Description	Values	Read (R) Write (W)	Operations
46	Heat mode energy consumption	0 ~ 65.534 W	R	0x03, 0x04
47	[Cool mode / Heat recovery mode] energy consumption	0 ~ 65.534 W	R	0x03, 0x04
49	<i>For future use</i>			
50	Version of Modbus gateway	Example: 0x0100 → v1.0.1	R	0x03, 0x04
52	Error code	0 → No error 1XXX → H + error 2XXX → F + error 3XXX → U + error	R	0x03, 0x04
64	Deice status	0 → Off 1 → On	R	0x03, 0x04
70	Current error status	0 → No error 1 → Error	R	0x03, 0x04
81	Tank connection	0 → No 1 → Yes	R & W	0x03, 0x04, 0x06, 0x10, 0x16
82	Number zones	1 → 1 zone 2 → 2 zones	R & W	0x03, 0x04, 0x06, 0x10, 0x16
83	Zone 1 setup	1 → Room 2 → Pool	R & W	0x03, 0x04, 0x06, 0x10, 0x16
84	Zone 2 setup	1 → Room 2 → Pool	R & W	0x03, 0x04, 0x06, 0x10, 0x16
85	Direction	1 → Room 2 → Tank	R	0x03, 0x04
86	Outdoor type	1 → STD 2 → TCAP 3 → HWT	R	0x03, 0x04
105	Heat / Cool meter	If K Series onwards: 0 → No 1 → Yes	R	0x03, 0x04
106	Tank meter	If K Series onwards: 0 → No 1 → Yes	R	0x03, 0x04
107	Electricity meter HP	If K Series onwards: 0 → No 1 → Yes	R	0x03, 0x04

Registers	Description	Values	Read (R) Write (W)	Operations
111	SG ready: Control pattern	If K Series onwards: 1 → Normal 2 → HP Stop 3 → Capacity 1 4 → Capacity 2	R	0x03, 0x04
112	Water pressure	If K Series onwards: 0 ~ 5080 mbar	R	0x03, 0x04
113	Water inlet 2 temperature	If L Series onwards: - 127 °C ~ 127 °C	R	0x03, 0x04
116	RC-1: Room thermostat internal sensor temperature	- 127 °C ~ 127 °C	R	0x03, 0x04
117	Model series	1 → H-Series 2 → J-Series 3 → K-Series 4 → L-Series 5 → M-Series	R	0x03, 0x04
118	RC-2: Room thermostat internal sensor temperature	- 127 °C ~ 127 °C	R	0x03, 0x04
120	Heat mode energy consumption total (MSB)	0 ~ 4.294.967.294 kWh	R	0x03, 0x04
121	Heat mode energy consumption total (LSB)			
122	Heat mode energy generation total (MSB)	0 ~ 4.294.967.294 kWh	R	0x03, 0x04
123	Heat mode energy generation total (LSB)			
124	[Cool mode / Heat recovery mode] energy consumption total (MSB)	0 ~ 4.294.967.294 kWh	R	0x03, 0x04
125	[Cool mode / Heat recovery mode] energy consumption total (LSB)			
126	[Cool mode / Heat recovery mode] energy generation total (MSB)	0 ~ 4.294.967.294 kWh	R	0x03, 0x04
127	[Cool mode / Heat recovery mode] energy generation total (LSB)			

Registers	Description	Values	Read (R) Write (W)	Operations
128	Tank mode energy consumption (MSB)	0 ~ 4.294.967.294 kWh	R	0x03, 0x04
129	Tank mode energy consumption (LSB)			
130	Tank mode energy generation (MSB)	0 ~ 4.294.967.294 kWh	R	0x03, 0x04
131	Tank mode energy generation (LSB)			
150	External SW	0 → No 1 → Yes	R & W	0x03, 0x04, 0x06, 0x10, 0x16
151	Heat / Cool SW	0 → Disable 1 → Enable	R & W	0x03, 0x04, 0x06, 0x10, 0x16
152	External compressor SW	If H/J/K/L Series: 0 → No 1 → Yes	R & W	0x03, 0x04, 0x06, 0x10, 0x16
		If M Series: 0 → No 1 → Yes - Heat source 2 → Yes - Heater	R & W	0x03, 0x04, 0x06, 0x10, 0x16
153	Solar connection	0 → No 1 → Yes - Buffer tank 2 → Yes - DHW tank	R & W	0x03, 0x04, 0x06, 0x10, 0x16
154	SG ready	If H/J/K/L Series: 0 → No 1 → Yes	R & W	0x03, 0x04, 0x06, 0x10, 0x16
		If M Series: 0 → No 1 → Yes - Capacity 2 → Yes - Power consumption	R & W	0x03, 0x04, 0x06, 0x10, 0x16
155	Δt Buffer tank	0 ~ 10 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
156	SG ready: DHW capacity up (I-0)	50 % ~ 150 % Resolution: ± 5 %	R & W	0x03, 0x04, 0x06, 0x10, 0x16
157	SG ready: Heat capacity up (I-1)	50 % ~ 150 % Resolution: ± 5 %	R & W	0x03, 0x04, 0x06, 0x10, 0x16
158	Compensation curve - Heat - Zone 1 - Max. temperature	20 °C ~ 75 °C ¹	R & W	0x03, 0x04, 0x06, 0x10, 0x16

¹ Arvot voivat vaihdella sisäyksikön mallista riippuen. Enimmäisarvo on määritetty Rekisteri 36.

Registers	Description	Values	Read (R) Write (W)	Operations
159	Compensation curve - Heat - Zone 1 - Min. temperature	20 °C ~ 75 °C ¹	R & W	0x03, 0x04, 0x06, 0x10, 0x16
160	Compensation curve - Heat - Zone 1 - Outdoor air min. temperature	- 20 °C ~ 15 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
161	Compensation curve - Heat - Zone 1 - Outdoor air max. temperature	- 20 °C ~ 15 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
162	Compensation curve - Heat - Zone 2 - Max. temperature	20 °C ~ 75 °C ¹	R & W	0x03, 0x04, 0x06, 0x10, 0x16
163	Compensation curve - Heat - Zone 2 - Min. temperature	20 °C ~ 75 °C ¹	R & W	0x03, 0x04, 0x06, 0x10, 0x16
164	Compensation curve - Heat - Zone 2 - Outdoor air min. temperature	- 20 °C ~ 15 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
165	Compensation curve - Heat - Zone 2 - Outdoor air max. temperature	- 20 °C ~ 15 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
166	Compensation curve - Cool - Zone 1 - Max. temperature	5 °C ~ 20 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
167	Compensation curve - Cool - Zone 1 - Min. temperature	5 °C ~ 20 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
168	Compensation curve - Cool - Zone 1 - Outdoor air min. temperature	15 °C ~ 30 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
169	Compensation curve - Cool - Zone 1 - Outdoor air max. temperature	15 °C ~ 30 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
170	Compensation curve - Cool - Zone 2 - Max. temperature	5 °C ~ 20 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
171	Compensation curve - Cool - Zone 2 - Min. temperature	5 °C ~ 20 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
172	Compensation curve - Cool - Zone 2 - Outdoor air min. temperature	15 °C ~ 30 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16

¹ Arvot voivat vaihdella sisäyöksikön mallista riippuen. Enimmäisarvo on määritetty Rekisteri 36.

Registers	Description	Values	Read (R) Write (W)	Operations
173	Compensation curve - Cool - Zone 2 - Outdoor air max. temperature	15 °C ~ 30 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
174	Solar (actual)	0 → Off 1 → On	R	0x03, 0x04
175	2-way valve direction (actual)	0 → Off 1 → On	R	0x03, 0x04
176	Zone 1: Water temperature	- 127 °C ~ 127 °C	R	0x03, 0x04
177	Zone 2: Water temperature	- 127 °C ~ 127 °C	R	0x03, 0x04
180	Buffer tank: Water temperature	- 127 °C ~ 127 °C	R	0x03, 0x04
181	Solar: Water temperature	- 127 °C ~ 127 °C	R	0x03, 0x04
182	Pool: Water temperature	- 127 °C ~ 127 °C	R	0x03, 0x04
184	Compressor total On time (MSB)	0 ~ 16.777.214 hours	R	0x03, 0x04
185	Compressor total On time (LSB)			
187	Tank mode energy generation	0 ~ 65.534 W	R	0x03, 0x04
188	Heat mode energy generation	0 ~ 65.534 W	R	0x03, 0x04
189	[Cool mode / Heat recovery mode] energy generation	0 ~ 65.534 W	R	0x03, 0x04
197	Powerful	1 → Off 2 → On 30 mins 3 → On 60 mins 4 → On 90 mins	R & W	0x03, 0x04, 0x06, 0x10, 0x16
198	Quiet	1 → Off 2 → Level 1 3 → Level 2 4 → Level 3	R & W	0x03, 0x04, 0x06, 0x10, 0x16
199	Quiet timer	1 → Cancel 2 → Set	R & W	0x03, 0x04, 0x06, 0x10, 0x16
200	System reset request	0 → No request 1 → Request	W	0x06, 0x10, 0x16
202	Sterilization request	0 → No request 1 → Request	W	0x06, 0x10, 0x16

Registers	Description	Values	Read (R) Write (W)	Operations
208	Optional PCB connection	0 → No 1 → Yes	R & W	0x03, 0x04, 0x06, 0x10, 0x16
212	Buffer tank connection	0 → No 1 → Yes	R & W	0x03, 0x04, 0x06, 0x10, 0x16
213	Heater capacity	If NOT Big-A2W: 3 kW 6 kW 9 kW	R & W	0x03, 0x04, 0x06, 0x10, 0x16
		If Big-A2W and Big-A2W heater capacity ≤ 18kW: 6 kW 12 kW 18 kW	R & W	0x03, 0x04, 0x06, 0x10, 0x16
		If Big-A2W and Big-A2W heater capacity > 18 kW: 1 htr 2 htr 3 htr	R & W	0x03, 0x04, 0x06, 0x10, 0x16
217	Bivalent heat mode	0 → No 1 → Yes	R & W	0x03, 0x04, 0x06, 0x10, 0x16
218	Bivalent DHW mode	0 → No 1 → Yes	R & W	0x03, 0x04, 0x06, 0x10, 0x16
219	Demand control	0 → No 1 → Yes	R & W	0x03, 0x04, 0x06, 0x10, 0x16
222	Defrost signal	If J Series onwards: 0 → No 1 → Yes	R & W	0x03, 0x04, 0x06, 0x10, 0x16
226	Zone 1: [Water shift/water/room/ pool] set temperature for heat mode	Range water shift: [- 5 °C ~ 5 °C] Range water: [20 °C ~ 75 °C] Range room: [10 °C ~ 30 °C] Range pool: [15 °C ~ 35 °C]	R & W	0x03, 0x04, 0x06, 0x10, 0x16
227	Zone 1: [Water shift/water/room] set temperature for cool mode	Range water shift: [- 5 °C ~ 5 °C] Range water: [5 °C ~ 20 °C] Range room: [18 °C ~ 35 °C]	R & W	0x03, 0x04, 0x06, 0x10, 0x16

¹ Arvot voivat vaihdella sisäyksikön mallista riippuen. Enimmäisarvo on määritetty Rekisteri 36.

Registers	Description	Values	Read (R) Write (W)	Operations
228	Zone 2: [Water shift/water/room/pool] set temperature for heat mode	Range water shift: [- 5 °C ~ 5 °C] Range water: [20 °C ~ 75 °C] Range room: [10 °C ~ 30 °C] Range pool: [15 °C ~ 35 °C]	R & W	0x03, 0x04, 0x06, 0x10, 0x16
229	Zone 2: [Water shift/water/room] set temperature for cool mode	Range water shift: [- 5 °C ~ 5 °C] Range water: [5 °C ~ 20 °C] Range room: [18 °C ~ 35 °C]	R & W	0x03, 0x04, 0x06, 0x10, 0x16
235	Current Lv	0 ~ 20 Lv	R & W	0x03, 0x04, 0x06, 0x10, 0x16
248	SG ready: DHW capacity up (2-0)	50 % ~ 150 % Resolution: ± 5 %	R & W	0x03, 0x04, 0x06, 0x10, 0x16
249	SG ready: Heat capacity up (2-1)	50 % ~ 150 % Resolution: ± 5 %	R & W	0x03, 0x04, 0x06, 0x10, 0x16
256	Tank: Floor operation time (maximum)	0 ~ 600 min Resolution: ± 30 min	R & W	0x03, 0x04, 0x06, 0x10, 0x16
257	Tank: Heat up time (maximum)	5 min ~ 240 min Resolution: ± 5 min	R & W	0x03, 0x04, 0x06, 0x10, 0x16
258	Tank: Re-heat temperature	- 12 °C ~ - 2 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
259	Tank: Sterilization boiling temperature	55 °C ~ 75 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
260	Tank: Sterilization operation time (maximum)	If J Series onwards: 10 min ~ 60 min Resolution: ± 10 min	R & W	0x03, 0x04, 0x06, 0x10, 0x16
261	SG ready: Cool capacity up (1-2)	If J Series onwards: - 15 °C ~ 0 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
262	SG ready: Cool capacity up (2-2)	If J Series onwards: - 15 °C ~ 0 °C	R & W	0x03, 0x04, 0x06, 0x10, 0x16
267	External SW	1 → Close 2 → Open	R	0x03, 0x04
268	Heat / Cool SW	1 → Heat 2 → Cool	R	0x03, 0x04

¹ Arvot voivat vaihdella sisäyksikön mallista riippuen. Enimmäisarvo on määritetty Rekisteri 36.

Registers	Description	Values	Read (R) Write (W)	Operations
269	Powerful (actual)	0 → Off 1 → On	R	0x03, 0x04
270	Quiet (actual)	0 → Off 1 → On	R	0x03, 0x04
271	Heat mode water set temperature range	1 → Range 1 2 → Range 2 3 → Range 3	R	0x03, 0x04
273	Room heater (actual)	0 → Off 1 → On	R	0x03, 0x04
274	Tank heater (actual)	0 → Off 1 → On	R	0x03, 0x04
275	Bivalent (actual)	0 → Off 1 → On	R	0x03, 0x04
276	Last error number (x1)	10 → No error 0 ~ 9	R	0x03, 0x04
277	Last error number (x2)	10 → No error 0 ~ 9	R	0x03, 0x04
278	Last error number (x3)	10 → No error 0 ~ 9	R	0x03, 0x04
280	Last error character	0 → No error 1 → U 2 → H 3 → F	R	0x03, 0x04
289	Sterilization status	0 → Off 1 → On	R	0x03, 0x04
305	Indoor unit model reference	To be read as hex. value (Example: 0x8170)	R	0x03, 0x04
314	Outdoor unit model reference	To be read as hex. value (Example: 0x8191)	R	0x03, 0x04
351	Capacity rank	0 ~ 30 kW	R	0x03, 0x04
352	Electricity meter HP	1 → No error 2 → Error	R	0x03, 0x04
353	Heat / Cool meter	1 → No error 2 → Error	R	0x03, 0x04
354	Tank meter	1 → No error 2 → Error	R	0x03, 0x04

Registers	Description	Values	Read (R) Write (W)	Operations
358	Modbus meter gateway	1 → No error 2 → Error 3 → Comm. not yet establish	R	0x03, 0x04
360 ²	Heat mode energy consumption	If K Series onwards: 0 ~ 65.534 W	R	0x03, 0x04
361 ³	[Cool mode / Heat recovery mode] energy consumption	If K Series onwards: 0 ~ 65.534 W	R	0x03, 0x04
362 ⁴	Tank mode energy consumption	If K Series onwards: 0 ~ 65.534 W	R	0x03, 0x04
363 ⁵	Heat mode energy generation	If K Series onwards: 0 ~ 65.534 W	R	0x03, 0x04
364 ⁶	[Cool mode / Heat recovery mode] energy generation	If K Series onwards: 0 ~ 65.534 W	R	0x03, 0x04
365 ⁷	Tank mode energy generation	If K Series onwards: 0 ~ 65.534 W	R	0x03, 0x04
366 ⁸ 367 ⁸	Total energy consumption	If K Series onwards: 0 ~ 4.294.967.294 Wh	R	0x03, 0x04
368 ⁸ 369 ⁸	Total heat mode energy generation	If K Series onwards: 0 ~ 4.294.967.294 Wh	R	0x03, 0x04
370 ⁸ 371 ⁸	Total [cool mode / heat recovery mode] energy generation	If K Series onwards: 0 ~ 4.294.967.294 Wh	R	0x03, 0x04
372 ⁸ 373 ⁸	Total tank mode energy generation	If K Series onwards: 0 ~ 4.294.967.294 Wh	R	0x03, 0x04
378	Consumption reset	0 → No request 1337 → Request to clear	W	0x06, 0x10, 0x16
417	SG ready: Power consumption (I-0): DHW	If M Series: 500 W to 10000 W Resolution: 100W	R & W	0x03, 0x04, 0x06, 0x10, 0x16
418	SG ready: Power consumption (I-1): Heat	If M Series: 500 W to 10000 W Resolution: 100W	R & W	0x03, 0x04, 0x06, 0x10, 0x16
419	SG ready: Power consumption (I-2): Cool	If M Series: 500 W to 10000 W Resolution: 100W	R & W	0x03, 0x04, 0x06, 0x10, 0x16

² Sukupolvesta K alkaen tämä rekisteri on monistettu Rekisteri 46.

³ Sukupolvesta K alkaen tämä rekisteri on monistettu Rekisteri 47.

⁴ Sukupolvesta K alkaen tämä rekisteri on monistettu Rekisteri 45.

⁵ Sukupolvesta K alkaen tämä rekisteri on monistettu Rekisteri 188.

⁶ Sukupolvesta K alkaen tämä rekisteri on monistettu Rekisteri 189.

⁷ Sukupolvesta K alkaen tämä rekisteri on monistettu Rekisteri 187.

⁸ Käytettävissä vain, jos mittausyhdyskäytävä on asennettu ulkoisen mittarin kanssa.

Registers	Description	Values	Read (R) Write (W)	Operations
420	SG ready: Power consumption (2-0): DHW	If M Series: 500 W to 10000 W Resolution: 100W	R & W	0x03, 0x04, 0x06, 0x10, 0x16
421	SG ready: Power consumption (2-1): Heat	If M Series: 500 W to 10000 W Resolution: 100W	R & W	0x03, 0x04, 0x06, 0x10, 0x16
422	SG ready: Power consumption (2-2): Cool	If M Series: 500 W to 10000 W Resolution: 100W	R & W	0x03, 0x04, 0x06, 0x10, 0x16
423	SG ready: HPU Stop consumption	If M Series: 500 W to 10000 W Resolution: 100W	R & W	0x03, 0x04, 0x06, 0x10, 0x16
426	Anti-stick mode	If M Series: 0 → Disable 1 → Enable	R	0x03, 0x04
427	DHW circulation	If M Series: 0 → Off 1 → On	R	0x03, 0x04
428	SG ready power consumption: Minimum range	If M Series: 1 → 0.5 Kw 2 → 1.0 Kw 3 → 1.5 Kw 4 → 2.0 Kw 5 → 2.5 Kw 6 → 3.0 Kw 7 → 3.5 Kw 8 → 4.0 Kw 9 → 5.0 Kw 10 → 6.0 Kw 11 → 7.0 Kw 12 → 8.0 Kw 13 → 9.0 Kw 14 → 10.0 Kw 15 → Not yet receive data from outdoor unit	R	0x03, 0x04

Registers	Description	Values	Read (R) Write (W)	Operations
429	SG ready power consumption: Maximum range	If M Series: 1 → 0.5 Kw 2 → 1.0 Kw 3 → 1.5 Kw 4 → 2.0 Kw 5 → 2.5 Kw 6 → 3.0 Kw 7 → 3.5 Kw 8 → 4.0 Kw 9 → 5.0 Kw 10 → 6.0 Kw 11 → 7.0 Kw 12 → 8.0 Kw 13 → 9.0 Kw 14 → 10.0 Kw 15 → Not yet receive data from outdoor unit	R	0x03, 0x04
432	Electrical anode (actual)	If M Series: 0 → Off 1 → On	R	0x03, 0x04
437	Big-A2W heater capacity	If Big-A2W: 0 → ≤ 18kW 1 → > 18kW	R & W	0x03, 0x04, 0x06, 0x10, 0x16
438	Big-A2W	If M Series: 0 → No 1 → Yes	R	0x03, 0x04

AIDOO PRO MODBUS PANASONIC AQUAREA M (PAW-AZAW-MBS-M [AZAI6WSPPN9])

Diagnosis display	Abnormality / Protection control	Abnormality judgement	Primary location to verify
H00	No abnormality detected	-	-
H12	Indoor / Outdoor capacity unmatched	90s after power supply	- Indoor / Outdoor connection wire - Indoor / Outdoor PCB - Specification and combination table in catalogue
H15	Outdoor compressor temperature sensor abnormality	Continue for 5s	Compressor temperature sensor (defective or disconnected)
H20	Water pump abnormality	Continue for 10s	- Indoor PCB - Water pump (malfunction)
H23	Indoor refrigerant liquid temperature sensor abnormality	Continue for 5s	Refrigerant liquid temperature sensor (defective or disconnected)
H27	Service valve error	Continue for 5 minutes	High pressure sensor (defective or disconnected)
H28	Abnormal solar sensor	Continue for 5s	Solar temperature sensor (defective or disconnected)
H31	Abnormal swimming pool sensor	Continue for 5s	Pool temperature sensor (defective or disconnected)
H36	Abnormal buffer tank sensor	Continue for 5s	Buffer tank sensor (defective or disconnected)
H38	Brand code not match	When indoor and outdoor brand code not same	-
H42	Compressor low pressure abnormality	-	- Outdoor pipe temperature sensor - Clogged expansion valve or strainer - Insufficient refrigerant - Outdoor PCB - Compressor
H43	Abnormal Zone 1 sensor	Continue for 5s	Water temperature Zone 1 sensor
H44	Abnormal Zone 2 sensor	Continue for 5s	Water temperature Zone 2 sensor
H62	Water flow switch abnormality	Continue for 1 minute	Water flow switch

Diagnosis display	Abnormality / Protection control	Abnormality judgement	Primary location to verify
H63	Refrigerant low pressure abnormality	Continue for 5s	· Outdoor low pressure sensor (defective or disconnected)
H64	Refrigerant high pressure abnormality	Continue for 5s	· Outdoor high pressure sensor (defective or disconnected)
H65	Deice circulation error	Continue for 10s	· Water flow switch sensor (defective or disconnected) · Water pump malfunction · Buffer tank (is used)
H67	Abnormal external thermistor 1	Continue for 5s	· Room temperature Zone 1 sensor
H68	Abnormal external thermistor 2	Continue for 5s	· Room temperature Zone 2 sensor
H70	Back-up heater OLP abnormality	Continue for 60s	· Back-up heater OLP (disconnection or activated)
H72	Tank sensor abnormal	Continue for 5s	· Tank sensor
H74	PCB communication error	Communication or transfer error	· Indoor main PCB and Sub PCB
H75	Low water temperature control	Room heater disable and deice request to operate under low water temperature	· Heater operation must enable to increase water temperature
H76	Indoor - control panel communication abnormality	-	· Indoor - control panel (defective or disconnected)
H90	Indoor / Outdoor abnormal communication	> 1 minute after starting operation	· Internal / External cable connections · Indoor / Outdoor PCB
H91	Tank heater OLP abnormality	Continue for 60s	· Tank heater OLP (disconnection or activated)
H95	Indoor / Outdoor wrong connection	-	· Indoor / Outdoor supply voltage
H98	Outdoor high pressure overload protection	-	· Outdoor high pressure sensor · Water pump or water leakage · Clogged expansion valve or strainer · Excess refrigerant · Outdoor PCB
H99	Indoor heat exchanger freeze prevention	-	· Indoor heat exchanger · Refrigerant shortage
F12	Pressure switch active	4 times occurrence within 20 minutes	· Pressure switch
F14	Outdoor compressor abnormal revolution	4 times occurrence within 20 minutes	· Outdoor compressor

Diagnosis display	Abnormality / Protection control	Abnormality judgement	Primary location to verify
F15	Outdoor fan motor lock abnormality	2 times occurrence within 30 minutes	- Compressor tank temperature sensor - Clogged expansion valve or strainer - Insufficient refrigerant - Outdoor PCB - Compressor
F16	Total running current protection	3 times occurrence within 20 minutes	- Excess refrigerant - Outdoor PCB
F20	Outdoor compressor overheating protection	4 times occurrence within 30 minutes	- Compressor tank temperature sensor - Clogged expansion valve or strainer - Insufficient refrigerant - Outdoor PCB - Compressor
F22	IPM (power transistor) overheating protection	3 times occurrence within 30 minutes	- Improper heat exchange - IPM (power transistor)
F23	Outdoor direct current (DC) peak detection	7 times occurrence continuously	- Outdoor PCB - Compressor
F24	Refrigeration cycle abnormality	2 times occurrence within 20 minutes	- Insufficient refrigerant - Outdoor PCB - Compressor low compression
F25	Cooling / Heating cycle changeover abnormality	4 times occurrence within 30 minutes	4-way valve - V-coil
F27	Pressure switch abnormality	Continue for 1 minute	Pressure switch
F29	Low discharge superheat	1 time occurrence within 2550 minutes	- Discharge temperature sensor - Discharge pressure sensor - Pressure switch - Outdoor PCB
F30	Water outlet sensor 2 abnormality	Continue for 5s	Water outlet sensor 2 (defective or disconnected)
F32	Abnormal internal thermostat	Continue for 5s	Control panel PCB thermostat
F36	Outdoor air temperature sensor abnormality	Continue for 5s	Outdoor air temperature sensor (defective or disconnected)
F37	Indoor water inlet temperature sensor abnormality	Continue for 5s	Water inlet temperature sensor (defective or disconnected)
F40	Outdoor discharge pipe temperature sensor abnormality	Continue for 5s	Outdoor discharge pipe temperature sensor (defective or disconnected)
F41	PFC control	4 times occurrence within 10 minutes	Voltage at PFC

Diagnosis display	Abnormality / Protection control	Abnormality judgement	Primary location to verify
F42	Outdoor heat exchanger temperature sensor abnormality	Continue for 5s	· Outdoor heat exchanger temperature sensor (defective or disconnected)
F43	Outdoor defrost sensor abnormality	Continue for 5s	· Outdoor defrost sensor (defective or disconnected)
F45	Indoor water outlet temperature sensor abnormality	Continue for 5s	· Water outlet temperature sensor (defective or disconnected)
F46	Outdoor current transformer (CT) open circuit	-	· Insufficient refrigerant · Outdoor PCB · Compressor low
F48	Outdoor EVA outlet temperature sensor abnormality	Continue for 5s	· Outdoor EVA outlet temperature sensor (defective or disconnected)
F49	Outdoor bypass outlet temperature sensor abnormality	Continue for 5s	· Outdoor bypass outlet temperature sensor (defective or disconnected)
F95	Cooling high pressure overload protection	-	· Outdoor high pressure sensor · Water pump or water leakage · Clogged expansion valve or strainer · Excess refrigerant · Outdoor PCB

Panasonic



airzonecontrol.com

Marie Curie, 21
29590 Málaga
Spain

v. 100

