




EN

ES



## Quick Guide


Aidoo Pro  
AZAI6WSPMHI

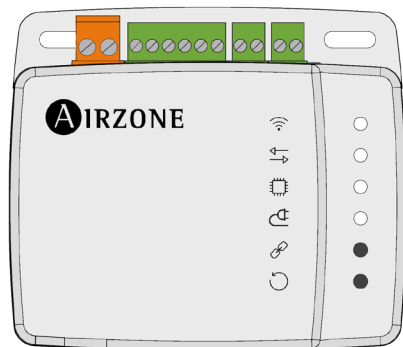

Nest  
Thermostat



**AIRZONE**

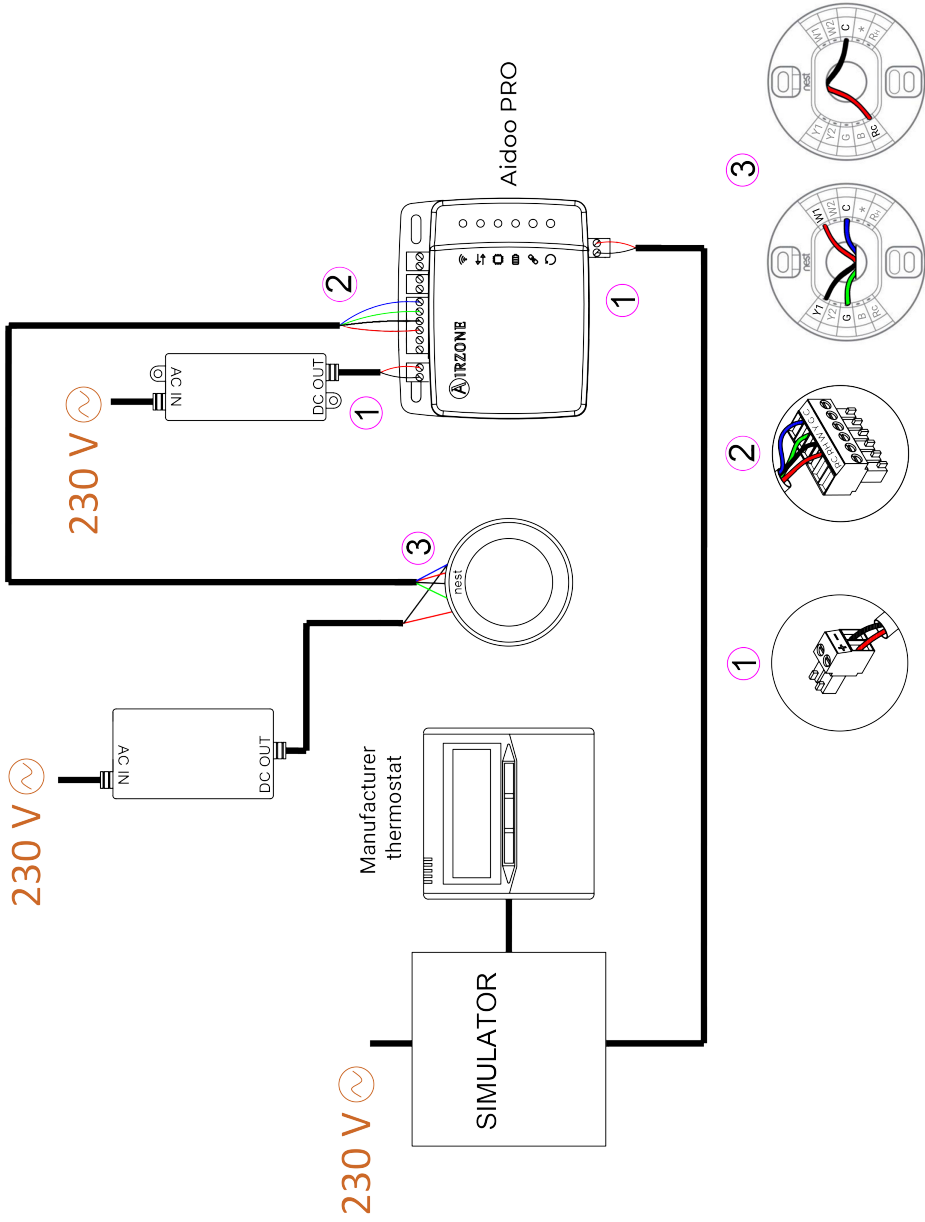

# Content

---

- AIRZONE CLOUD \_\_\_\_\_ 2
- AIDOO CONFIGURATION \_\_\_\_\_ 2
  - > Adding a device using the Airzone Cloud app \_\_\_\_\_ 2
- NEST THERMOSTAT CONFIGURATION \_\_\_\_\_ 5
- LINK AIDOO AND NEST THERMOSTAT \_\_\_\_\_ 6
  - > Link third-party account \_\_\_\_\_ 6

# Airzone Cloud

To connect to the Airzone device you must have the Airzone Cloud app installed on your iOS or Android device. In the sign in page, fill in the following fields:



- **Name**
- **Surname**
- **Email** (use a Google account)
- **Password**



## Aidoo configuration


### ADDING A DEVICE USING THE AIRZONE CLOUD APP

1. On the start screen or from the sidebar, tap "Configuration wizard" to start the process.

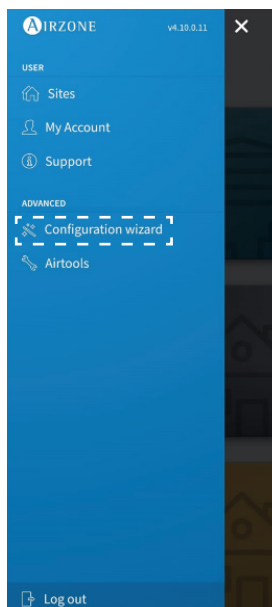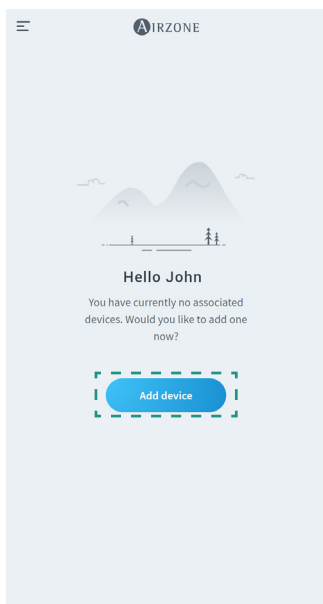


2. Press the "Search units" icon. Your mobile device will start the search for available Bluetooth devices and display a list of the devices found. Select the unit you wish to associate, in this case the Aidoo AZA16WSPMHI device.


*Note: If you don't find the device on the list, make sure you are near the device you want to associate and press the "Search units" icon again.*

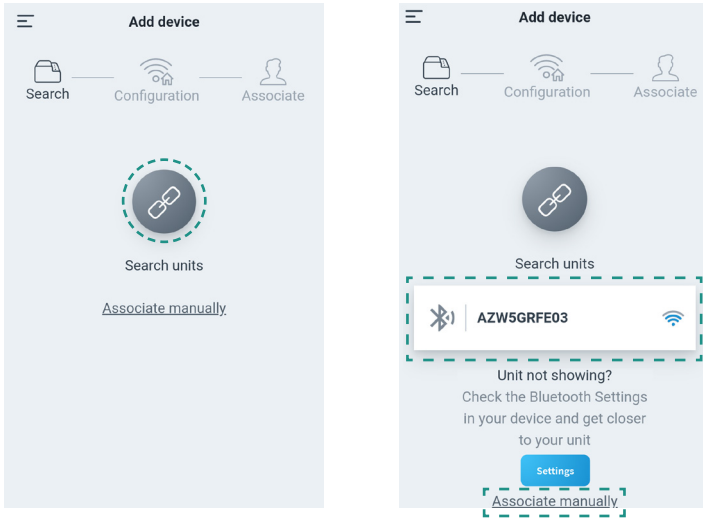

If your device is not listed, press "Associate manually" and enter the MAC and the PIN for your device. You can find the MAC and PIN information in the information sticker on the Webserver.

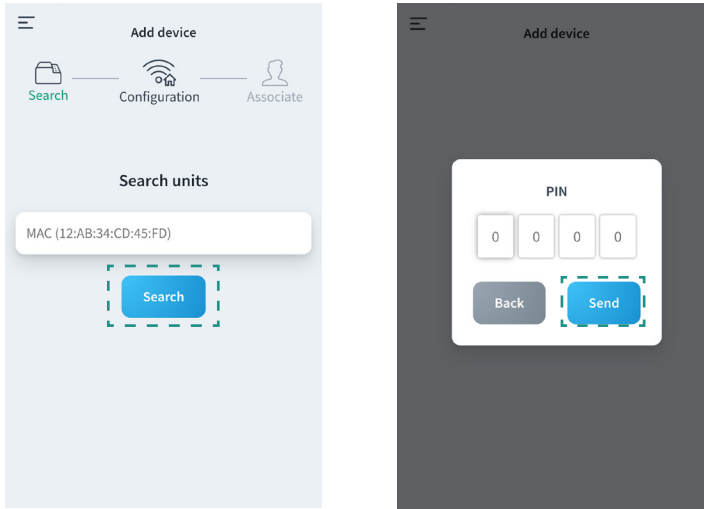


3. You can check the information and status of the device by clicking on "Webserver Info". Confirm that the device you want to associate is the correct one by clicking on "Yes".

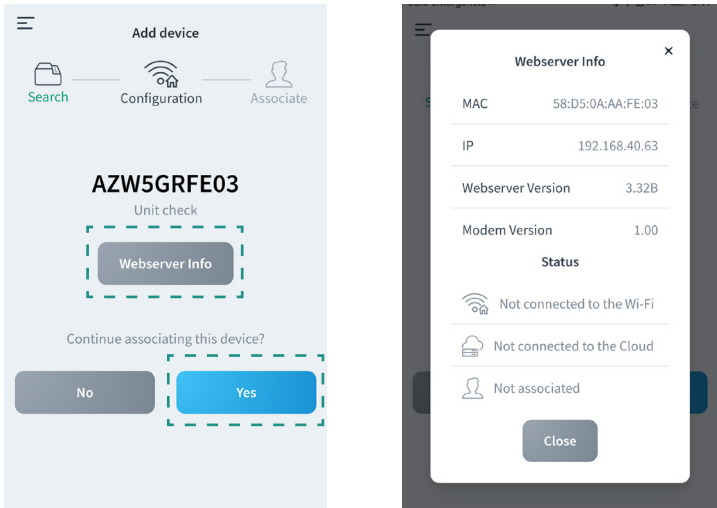



4. Select your Wi-Fi network and enter your password. To connect manually, click on "Configure Wifi-Manually" and enter the name and password of the Wi-Fi network you wish to associate. Once connected to your Wi-Fi network, press "Yes" to continue.

*Note: If your Wi-Fi network is not found, click on "Search again" to refresh the list.*

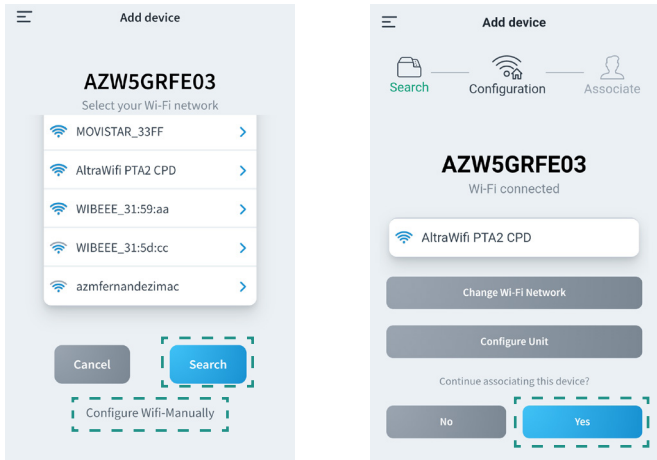

5. To finish, press on the site you want to link the device to or select "Add new site" and fill in the following fields:

- Name
- Location
- Icon

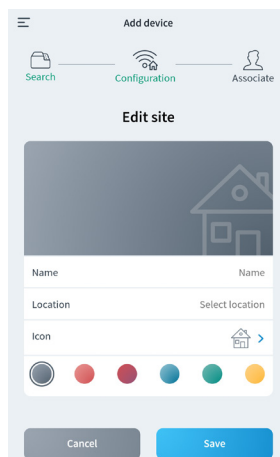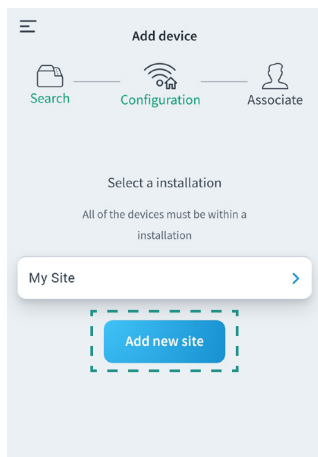

*Important: It is highly recommended to choose a name that is both unique and easily distinguishable (e.g.: the MAC for your device.).*

## Nest Thermostat configuration

To perform advanced configuration of the Nest Thermostat, you will need:

- **A Google Account**
- **The Google Home App**
- **Wi-Fi connection**

*Important: The Google Account used to sign in to the Google Home App must be the same account you have signed in to Airzone Cloud in order to link both devices.*

To begin the process of configuring the Nest Thermostat, please refer to the manufacturer's guide:





# Link Aidoo and Nest Thermostat



## LINK THIRD-PARTY ACCOUNT

EN

1. To link a third-party account, click on "Integrations" in the "My Account" menu.
2. Then click on "Add Device" and select the manufacturer of your third-party thermostat to link its account.

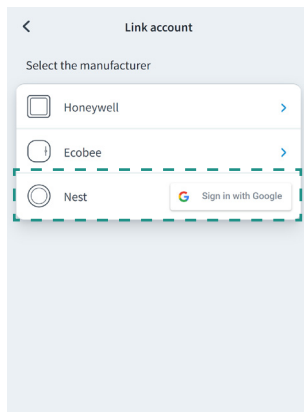
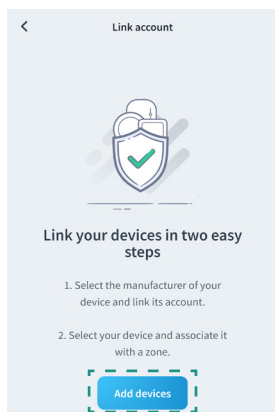


3. You will be redirected to the manufacturer's website to authorize the link through your user credentials.
4. Once the account is linked, a list of the devices linked to that user account will be displayed. Click on the one you want to associate with a zone.

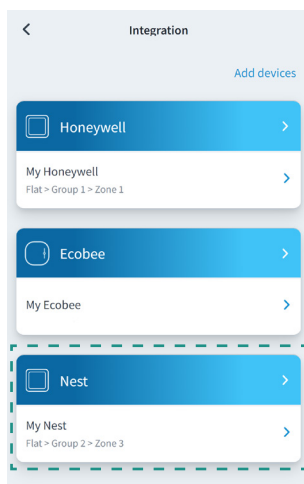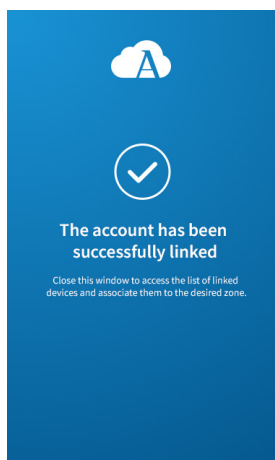



5. Select the available and compatible zone to which you want to link the third-party thermostat; this zone must be the same one you have linked the Aidoo device with.
6. Finally, in case the third-party thermostat loses Internet connection, you must choose the behavior of the zone from the following options:
  - The indoor unit will follow the commands of the Airzone device.
  - The indoor unit will follow the commands of the associated thermostat. **In this case, when your thermostat's Internet connection is lost, communications with your Airzone device will also be lost, preventing you from interacting with the associated zone from the application.**

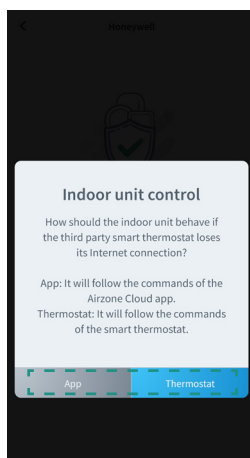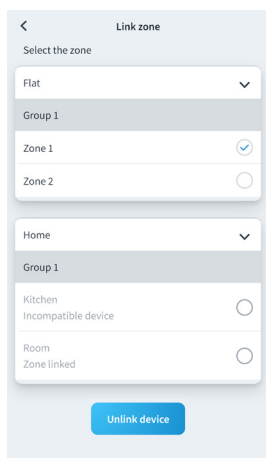

Once you have linked the Aidoo device and the Nest Thermostat, verify the connection between both devices by making adjustments to the temperature or the operation mode. The information should be correctly displayed in both devices as well as on the manufacturer's thermostat.

# Contenido

---

- INICIO DE SESIÓN EN AIRZONE CLOUD\_\_\_\_\_2
- CONFIGURACIÓN: AIDOO \_\_\_\_\_2
  - > Añadir dispositivo Aidoo mediante Airzone Cloud\_\_\_\_\_2
- CONFIGURACIÓN: NEST THERMOSTAT \_\_\_\_\_5
- VINCULAR AIDOO Y NEST THERMOSTAT \_\_\_\_\_6
  - > Vincular cuenta de terceros \_\_\_\_\_6

# Inicio de sesión en Airzone Cloud

Para realizar la conexión y configuración con el dispositivo Airzone, es necesario tener instalada la aplicación Airzone Cloud en su dispositivo iOS o Andorid. Regístrese en la aplicación creando unas nuevas credenciales e inicie sesión:

ES



- **Nombre**
- **Apellidos**
- **Correo electrónico** (debe ser una cuenta de Google).
- **Contraseña**



## Configuración: Aidoo


### AÑADIR DISPOSITIVO AIDOO MEDIANTE AIRZONE CLOUD

1. En la pantalla de inicio o desde la barra lateral, pulse "Asistente de configuración" para iniciar el proceso.

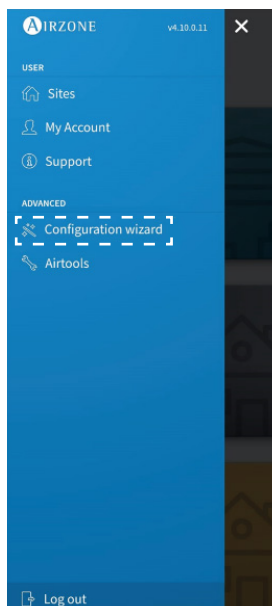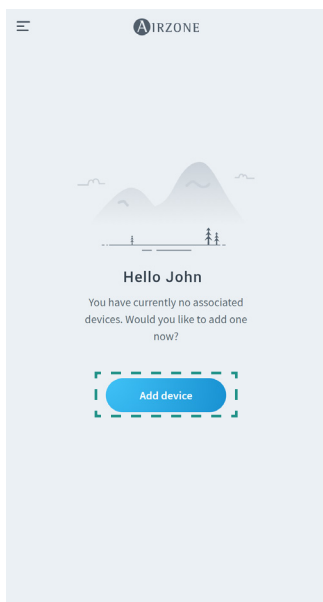


2. Pulse en el icono "Buscar unidades". Su dispositivo móvil iniciará la búsqueda de dispositivos Bluetooth disponibles y mostrará un listado con los dispositivos encontrados. Seleccione la unidad que desea asociar, en este caso el Aidoo AZAI6WSPMHI.


*Nota: En caso de no encontrar el dispositivo en el listado, asegúrese de encontrarse cerca del dispositivo que desea asociar y pulse de nuevo en el icono "Buscar unidades."*

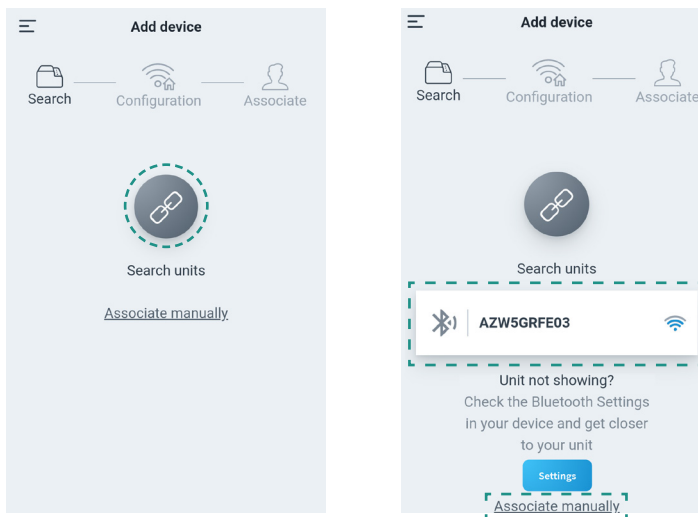

Si su dispositivo no aparece en el listado, pulse en "Asociar manualmente" e introduzca la MAC y el PIN de su dispositivo. Puede encontrar la información de MAC y el PIN en la pegatina informativa de su dispositivo Aidoo.

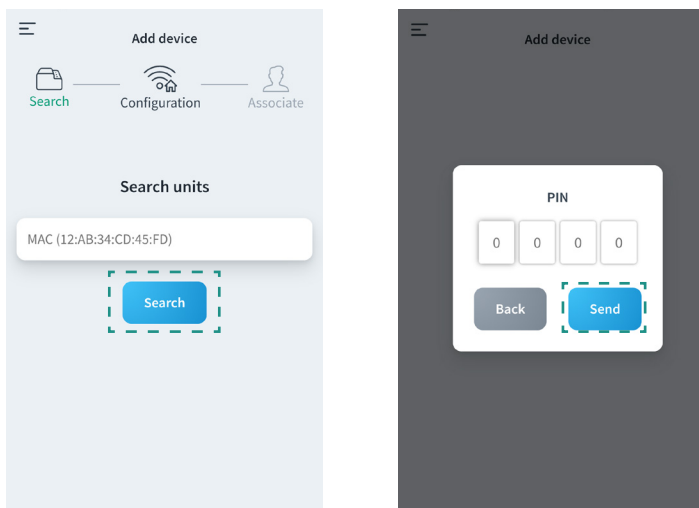


3. Puede consultar la información y el estado del dispositivo pulsando en "Información del Webserver". Confirme que el dispositivo que desea asociar es el correcto pulsando en "Sí".

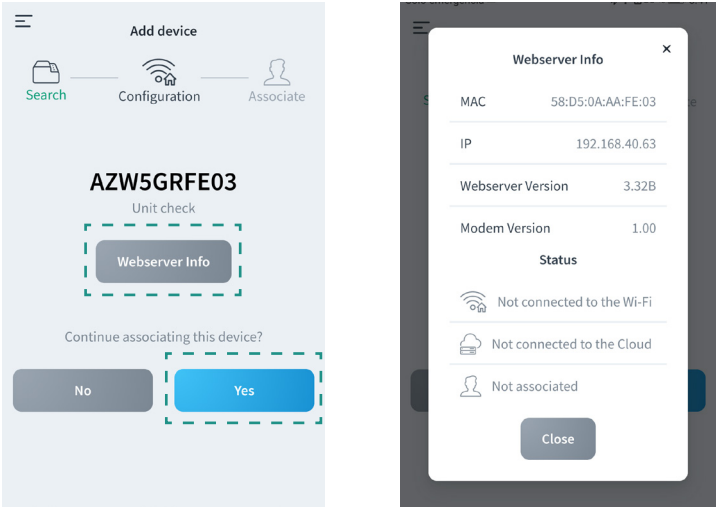



4. A la hora de realizar la conexión Wi-Fi, el dispositivo debe ser vinculado a una nueva red. Realice la conexión de forma manual a su red Wi-Fi pulsando en "Configurar Wifi-Manualmente", e introduzca nombre y contraseña de la red Wi-Fi que desea asociar. Una vez conectado a su red Wi-Fi, pulse en "Sí" para continuar.

*Nota: Si no encuentra la red Wi-Fi, pulse de nuevo en "Buscar" para refrescar el listado.*

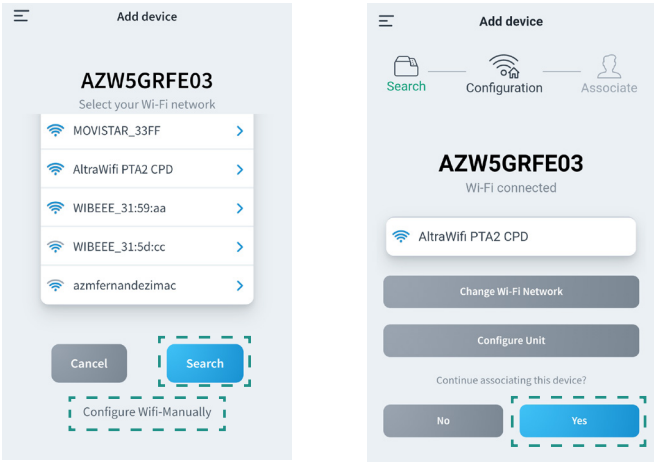

5. Para finalizar, pulse en el sitio al que desea vincular el dispositivo o seleccione "Añadir nuevo sitio" y rellene los siguientes campos:

- Nombre
- Ubicación
- Icono

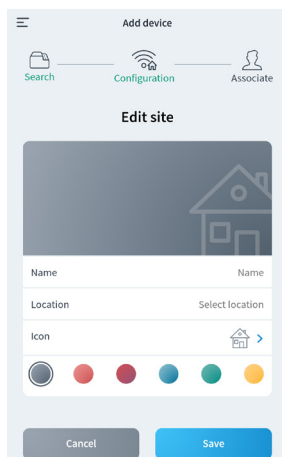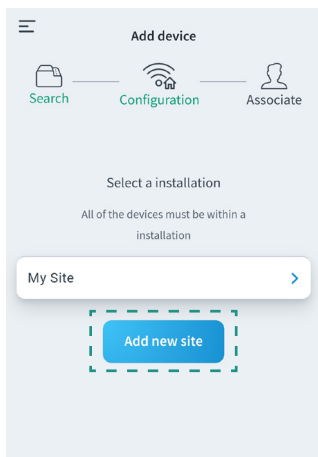

ES

*Importante: Se recomienda escoger un nombre que sea único y fácilmente diferenciable (p.ej.: el número MAC del dispositivo).*

## Configuración: Nest Thermostat

Para realizar la configuración de su Nest Thermostat se necesitan los siguientes elementos:

- Cuenta de Google
- Aplicación Google Home
- Conexión Wi-Fi

*Importante: La cuenta de Google usada para iniciar sesión en la aplicación Google Home debe ser la misma cuenta con la que ha iniciado sesión en Airzone Cloud, para que ambos dispositivos puedan vincularse.*



Consulte los pasos a seguir para realizar la instalación y configuración de su Nest Thermostat en la documentación del fabricante:





# Vincular Aidoo y Nest Thermostat

## VINCULAR CUENTA DE TERCEROS



1. Para vincular una cuenta de terceros, pulse en 'Integraciones' en el menú "Mi cuenta".
2. Posteriormente pulse en "Añadir dispositivo" y seleccione el fabricante de su termostato de terceros para vincular su cuenta.

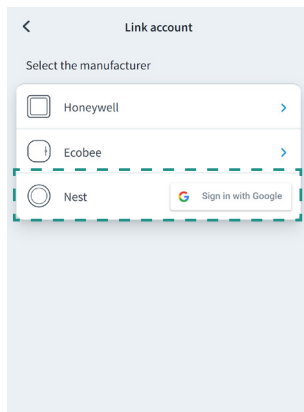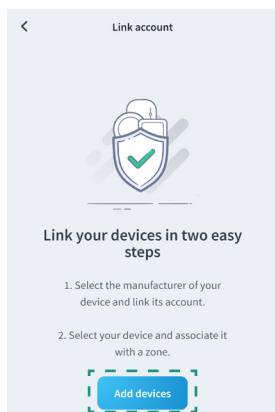

3. Será redirigido a la web del fabricante para autorizar la vinculación mediante sus credenciales de usuario.
4. Una vez vinculada la cuenta, se muestra un listado de los dispositivos vinculados a esa cuenta de usuario, pulse sobre el que desee asociar a una zona.

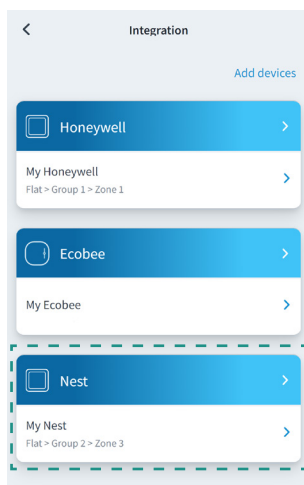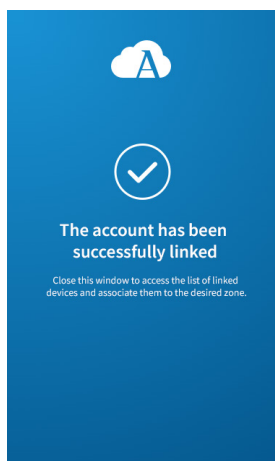

5. Seleccione la zona disponible y compatible a la que desea vincular el termostato de terceros; esta zona debe ser la misma que el sitio al que se ha vinculado el dispositivo Aidoo.
6. Para finalizar, debe elegir el comportamiento de la zona en caso de que el termostato de terceros pierda la conexión a internet de entre las siguientes opciones:
  - La unidad interior seguirá las ordenes del dispositivo Airzone.
  - La unidad interior seguirá las ordenes del termostato asociado. **En este caso, cuando se pierda la conexión a internet de su termostato también se perderán las comunicaciones con su dispositivo Airzone, impidiendo interactuar con la zona asociada desde la aplicación.**

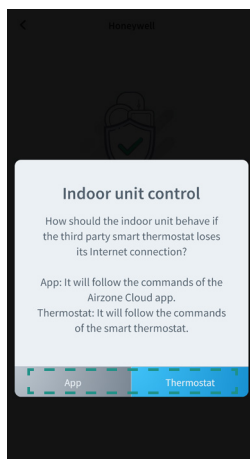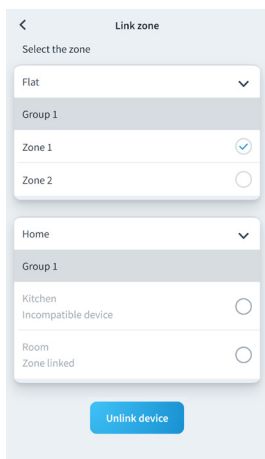

Una vez se hayan vinculado el dispositivo Aidoo y el termostato Nest, compruebe que la conexión entre ambos es correcta modificando la temperatura o el modo de trabajo. La información debe sincronizarse tanto en ambos dispositivos como en el termostato del fabricante.





[airzonecontrol.com](http://airzonecontrol.com)

---

Parque Tecnológico de Andalucía  
Marie Curie, 21 · 29590 Málaga (España)